


PV Axial piston pump

PV Series axial piston pump

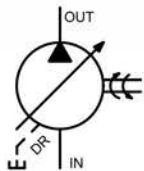

nominal pressure: 350 bar

max. pressure: 420 bar

1. New type of swash plate and large servo piston with strong bias spring achieves fast response, reduce the noise due to active decompression of system at down stroke.

2. Nine pistons and new precompression technology (precompression filter volume) result in unbeaten low outlet flow pulsation.

3. Complete compensator program offers multiple controls.

4. Rigid and FEM-optimized body design for lowest noise level.

5. Thru drive for 100% nominal torque.

6. Pump combinations (multiple pumps) of same size and model and mounting interface for basically all metric or SAE mounting interfaces.

7. Wide application in automobile industrial, ships, forging machines, tire machines, injection molding machines, machine tools, special-purpose machine.

Quick Reference Data Chart

Size	Model	Pressure		Displacement		Pump Delivery (7 bar) 100 PSI				APPROX. Noise Levels			Speed		Weight
		nominal pressure	max. pressure	cm ³ /rev	In ³ /rev	1500 RPM		1800 RPM		dBA Full Flow and 1500 RPM			Max. RPM	Min. RPM	(KG)
						LPM	U.S. GPM	LPM	U.S. GPM	70 bar (1 KSI)	207 bar (3 KSI)	343 bar (5 KSI)			
1	PV016	350	420	16	0.98	24	6.3	28.8	7.6	56	60	68	2750		19 (42)
	PV020			20	1.2	30	7.9	36	9.5						
	PV023			23	1.4	34.5	9.1	41.4	10.9						
	PV028	315	350	28	1.7	42	11	50.4	13.2						
2	PV032	350	420	32	1.9	48	12.7	57.6	15.2	59	62	69	2400		30 (66)
	PV040			40	2.4	60	15.9	72	19						
	PV046			46	2.8	69	18.2	82.2	21.9						
	PV056	280	350	56	3.41	84	22.1	100.8	26.6						
	PV065	250	315	65	3.96	97.5	25.7	117	30.9						
3	PV063	350	420	63	3.8	94.5	25	113.4	30	66	70	74	2100	300	60 (132)
	PV071			71	4.3	107	28.3	128.7	34				2100		
	PV080			80	4.8	120	31.7	144	38				2000		
	PV092			92	5.6	138	36.5	165.6	43.8				1900		
	PV110	250	280	110	6.7	165	43.6	198	52.3				1900		
	PV125	250	280	125	7.6	187.5	49.5	225	59.4				1900		
4	PV140	350	420	140	8.5	210	55.5	252.1	66.6	70	74	76	2200		90 (198)
	PV180			180	11	270	71.3	324	85.6	71	75	77			
	PV210	300	350	210	12.8	315	83.1	378	99.8	73	77	79	2100		
5	PV270	350	420	270	16.5	405	107	486	128.4	77	79	89	1800		172 (379)

1. Outlet port is on the top, the pipe pressure should be less than 2 bar.

2. The usage of max. Pressure for each circle never exceed 6 seconds. Please see the General Installation Information for hydraulic oil cleanliness manual.

3. YEOSHE offers tandem pump or other types of pump connection. The mounting has Metric and SAE dimensions.



Type code for standard program

A

2

PV Axial piston pump

PV	063	GA	3	R	M	1	A	0	N	
1	2	3	4	5	6	7	8	9	10	11
Series	Size and displacement	Control device	Pressure adjusting	Rotation	Mounting	Threads	Thru drive & 2nd pump	Voltage	Seals	Design No.
		E								
		4								

Horse power
for horse power control ("P" prefix)

Series

1	Axial piston pump variable displacement high pressure version	nominal pressure: 350 bar max. pressure : 420 bar	PV
---	---	--	----

Size and displacement

2	Code		016	020	023	028	032	040	046	056	065	063	071	080	092	110	125	140	180	210	270
	Size		1				2					3					4			5	
	Displacement	cm ³ /rev	16	20	23	28	32	40	46	56	65	63	71	80	92	110	125	140	180	210	270
		In ³ /rev	0.98	1.2	1.4	1.7	1.9	2.4	2.8	3.41	3.96	3.8	7.3	4.8	5.6	6.6	7.6	8.5	11	12.6	16.5

Control device

	Standard pressure compensator	A0
	None pressure compensator (fixed displacement) (pressure protection required)	LN
	Electrical 2-stage flow compensator (pressure protection required)	LS
	Fixed displacement 2-stage flow compensator (pressure protection required)	LC
	Remote type	
	Remote pressure compensator with NG6 interface	GM
	Remote pressure compensator + Relief valve	GA
	Remote pressure compensator + Proportional pressure valve	GJ
	Electrical unloading type	
	Remote pressure compensator + Electrical unloading	GR
	Remote pressure compensator + 2-stage pressure control	GB
	Remote pressure compensator + Electrical unloading + 2-stage pressure control	GC
	Load-sensing type	
3	Load-sensing compensator with NG6 interface	HM
	Load-sensing compensator + Relief valve	HA
	Load-sensing compensator + Proportional pressure valve	HJ
	Load-sensing + Electrical unloading type	
	Load-sensing compensator + Electrical unloading	HR
	Load-sensing compensator + 2-stage pressure control	HB
	Load-sensing compensator + Electrical unloading + 2-stage pressure control	HC
	Proportional pressure, flow type	
	Load-sensing compensator + Proportional flow valve + Relief valve	HQ
	Load-sensing compensator + Proportional pressure valve + Proportional flow valve	HK
	None-stage flow compensator (Cylinder)	BQ
	2-valve load-sensing type	
	2-valve load-sensing compensator with NG6 interface	VM
	2-valve load-sensing compensator + Relief valve	VA
	2-valve load-sensing compensator + Proportional pressure valve	VJ

Type code for standard program

PV	063	GA	3	R	M	1	A	0	N	
1	2	3	4	5	6	7	8	9	10	11
Series	Size and displacement	Control device	Pressure adjusting	Rotation	Mounting	Threads	Thru drive & 2nd pump	Voltage	Seals	Design No.
		E								
		4								

Horse power
for horse power control ("P" prefix)

Control device

	2-valve proportional pressure, flow type	
	2-valve load-sensing compensator + Proportional flow valve + Relief valve	VQ
	2-valve load-sensing compensator + Proportional pressure valve + Proportional flow valve	VK
	Proportional compensation type	
	2-valve load-sensing compensator + High reacted proportional flow valve + Flow feed back+ Relief valve	FV
	2-valve load-sensing compensator + High reacted proportional flow valve + Proportional pressure + Flow & Pressure feed back	FG
3	Horse power type	
	Horse power compensator with NG6 interface	PM
	Horse power compensator + Relief valve	PA
	Horse power compensator + Proportional pressure valve	PJ
	Horse power compensator + Relief valve + Electrical unloading	PR
	Horse power load-sensing compensator + Relief valve	PH
	Horse power load-sensing compensator + Proportional flow valve + Relief valve	PQ
	Horse power load-sensing compensator + Proportional pressure valve	PS

Pressure adjustment

	10~140 bar (145~2030 PSI)	2
	35~250bar (507~3625 PSI)	3
4	40~280bar (580~4060 PSI)	4
	50~315bar (725~4567 PSI)	5
	70~350bar (1015~5075 PSI)	6

Pressure range for each displacement:

		2	3	4	5	6
	PV016~PV023	■	■	■	■	■
	PV028	■	■	■	■	-
	PV032~PV046	■	■	■	■	■
	PV056	■	■	■	-	-
	PV065	■	■	-	-	-
4	PV063~PV092	■	■	■	■	■
	PV110,PV125	■	■	-	-	-
	PV140,PV180	■	■	■	■	■
	PV210	■	■	■	-	-
	PV270	■	■	■	■	■



Type code for standard program

A

4

PV Axial piston pump

Pressure range for each control device:

	2	3	4	5	6
A0 Standard pressure compensator	■	■	■	■	■
LN None pressure compensator (fixed displacement) (pressure protection required)	■	■	■	■	■
LS Electrical 2-stage flow compensator (pressure protection required)	■	■	■	■	■
LC Fixed displacement 2-stage flow compensator (pressure protection required)	■	■	■	■	■
Remote type					
GM Remote pressure compensator with NG6 interface	■	■	■	■	■
GA Remote pressure compensator + Relief valve	■	■	■	■	■
GJ Remote pressure compensator + Proportional pressure valve	■	■	-	-	-
Electrical unloading type					
GR Remote pressure compensator + Electrical unloading	■	■	■	■	■
GB Remote pressure compensator + 2-stage pressure control	■	■	■	■	■
GC Remote pressure compensator + Electrical unloading + 2-stage pressure control	■	■	■	■	■
Load-sensing Type					
HM Load-sensing compensator with NG6 interface	■	■	■	■	■
HA Load-sensing compensator + Relief valve	■	■	■	■	■
4 HJ Load-sensing compensator + Proportional pressure valve	■	■	-	-	-
Load-sensing + Electrical unloading type					
HR Load-sensing compensator + Electrical unloading	■	■	■	■	■
HB Load-sensing compensator + 2-stage pressure control	■	■	■	■	■
HC Load-sensing compensator + Electrical unloading + 2-stage pressure control	■	■	■	■	■
Proportional pressure, flow type					
HQ Load-sensing compensator + Proportional flow valve + Relief valve	■	■	■	■	■
HK Load-sensing compensator + Proportional pressure valve + Proportional flow valve	■	■	-	-	-
BQ None-stage flow compensator (Cylinder)	■	■	■	■	■
2-Valve load-sensing type					
VM 2-valve load-sensing compensator with NG6 interface	■	■	■	■	■
VA 2-valve load-sensing compensator + Relief valve	■	■	■	■	■
VJ 2-valve load-sensing compensator + Proportional pressure valve	■	■	-	-	-
2-valve proportional pressure, flow type					
VQ 2-valve load-sensing compensator + Proportional flow valve + Relief valve	■	■	■	■	■
VK 2-valve load-sensing compensator + Proportional pressure valve + Proportional flow valve	■	■	-	-	-

Type code for standard program

Pressure range for each control device:

2 3 4 5 6

Proportional compensation type		2	3	4	5	6
4	FV 2-valve load-sensing compensator + High reacted proportional flow valve + Flow feed back + Relief valve	■	■	■	■	■
	FG 2-valve load-sensing compensator + High reacted proportional flow valve + Proportional pressure + Flow & Pressure feed back	■	■	■	■	■
	Horse power type					
	PM Horse power compensator with NG6 interface	■	■	■	■	■
	PA Horse power compensator + Relief valve	■	■	■	■	■
	PJ Horse power compensator + Proportional pressure valve	■	■	-	-	-
	PR Horse power compensator + Relief valve + Electrical unloading	■	■	■	■	■
	PH Horse power load-sensing compensator + Relief valve	■	■	■	■	■
	PQ Horse power load-sensing compensator + Proportional flow valve + Relief valve	■	■	■	■	■
	PS Horse power load-sensing compensator + Proportional pressure valve	■	■	-	-	-

A

5

PV Axial piston pump



Type code for standard program

A

6

PV Axial piston pump

PV	063	GA	3	R	M	1	A	0	N	
1	2	3	4	5	6	7	8	9	10	11
Series	Size and displacement	Control device	Pressure adjusting	Rotation	Mounting	Threads	Thru drive & 2nd pump	Voltage	Seals	Design No.

E	Horse power for horse power control ("P" prefix)
4	

Pressure adjusting (Please following page A-41~43)

	Displacement	Horse power
4	PV016~PV023,28	A 3KW B 4KW C 5.5KW D 7.5KW E 11KW
	PV032~PV046,56,65	C 5.5KW D 7.5KW E 11KW F 15KW G 18.5KW H 22KW
	PV063~PV092,110,125	E 11KW F 15KW G 18.5KW H 22KW I 30KW J 37KW K 45KW
	PV140	G 18.5KW H 22KW I 30KW J 37KW K 45KW L 55KW
	PV180,210	H 22KW I 30KW J 37KW K 45KW L 55KW M 75KW N 90KW
	PV270	J 37KW K 45KW L 55KW M 75KW N 90KW O 110KW P 132KW

Rotation

5	Clockwise	R
	Counter clockwise	L

Mounting

Body		1	2	3	4	5
Mounting						
6	Metric	Parallel keyed	M R	M R	M R Q	M R
		Splined	K S	K S P	K S P	K S
	Inch	Parallel keyed	N J	N J	N J F	N J
		Splined	D U	D U G	D U G	D U

Threads

(Dimensions refer to dimension diagram)

7	BSPP (G)	1	※
	PT (RC)	2	
	UNF (SAE)	3	
	ISO 6149 (M)	7	

Thru drive & 2nd pump

	Displacement	Code
8	PV016~PV270	A Single pump B Prepared for thru drive
	PV016~PV023,28	C D E I J K
	PV032~PV046,56,65	D E F I J K L
	PV063~PV092,110,125	D E F G I J K L M
	PV140~PV180,210	D E F G J K L M
	PV270	D E F G H J K L M N

■ = available - = on request ※ = standard type

Type code for standard program

PV	063	GA	3	R	M	1	A	0	N	
1	2	3	4	5	6	7	8	9	10	11
Series	Size and displacement	Control device	Pressure adjusting	Rotation	Mounting	Threads	Thru drive & 2nd pump	Voltage	Seals	Design No.
			E							
			4							

Horse power
for horse power control ("P" prefix)

Size

8	SAE AA, Ø50.8 mm	C
	SAE A, Ø82.55 mm	D
	SAE B, Ø101.6 mm	E
	SAE C, Ø127 mm	F
	SAE D, Ø152.4 mm	G
	SAE E, Ø165.1 mm	H
	Metric, Ø63 mm	I
	Metric, Ø80 mm	J
	Metric, Ø100 mm	K
	Metric, Ø125 mm	L
	Metric, Ø160 mm	M
	Metric, Ø200 mm	N

Other pumps are acceptable to order

Voltage

9	None	0
	AC100V (50/60HZ)	A
	AC110V (60HZ)	B
	AC200V (50/60HZ)	C
	AC220V (60HZ)	D
	DC 12V	E
	DC 24V	F

Seals

10	NBR	N	※
	VITON, FKM	V	
	Ethylen-propylene	E	




Pressure & Flow Adjustment

A

8

PV Axial piston pump

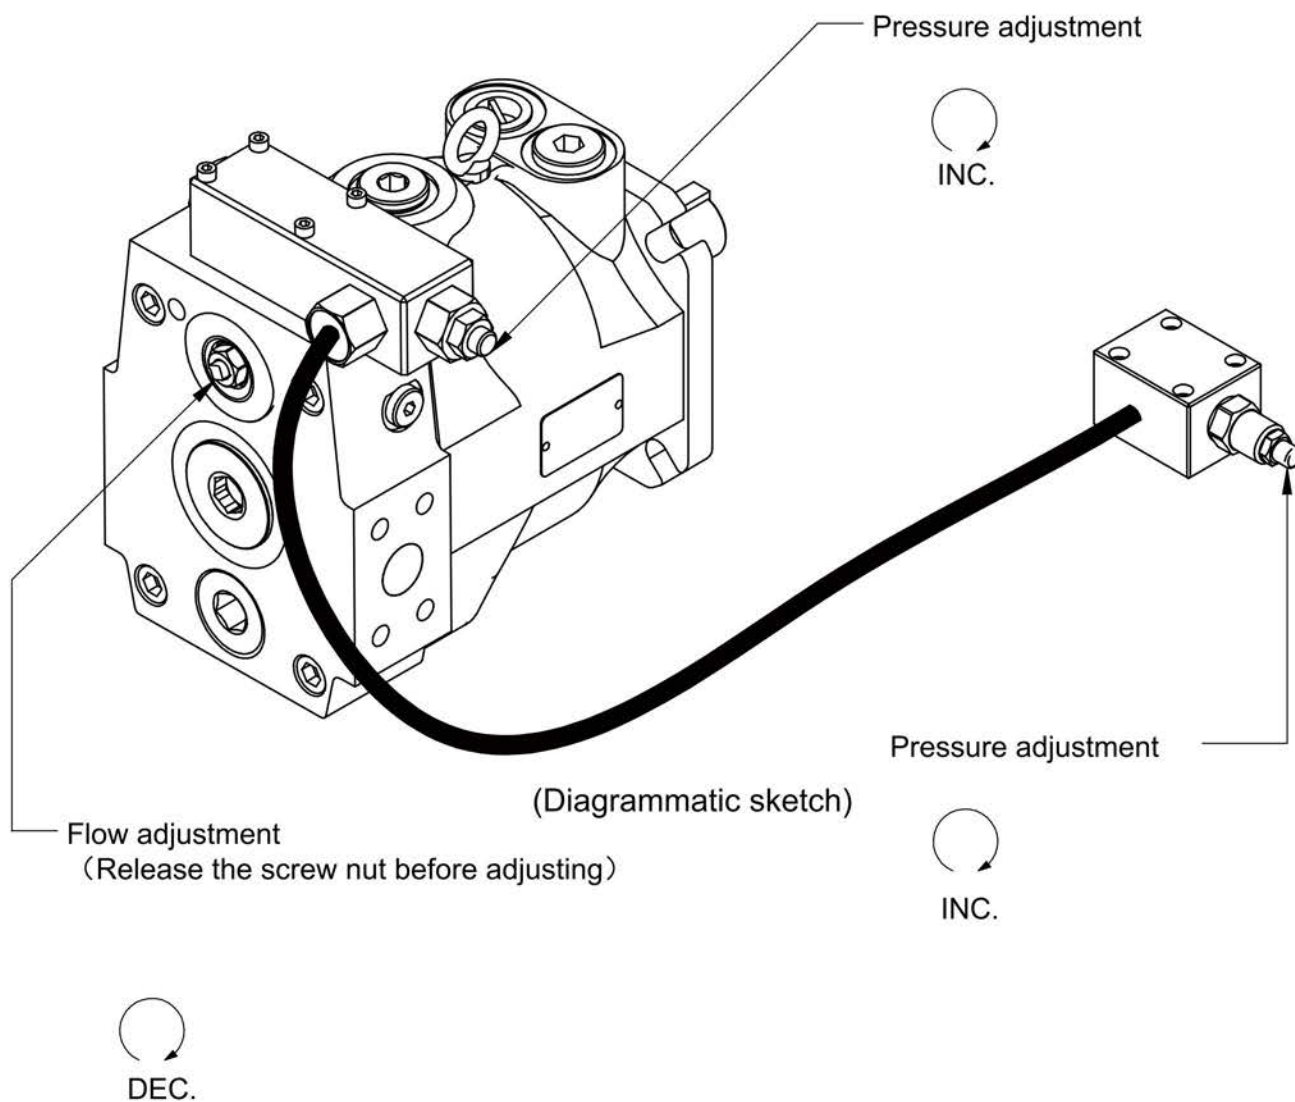


A0 Standard pressure compensator

A

9

PV Axial piston pump

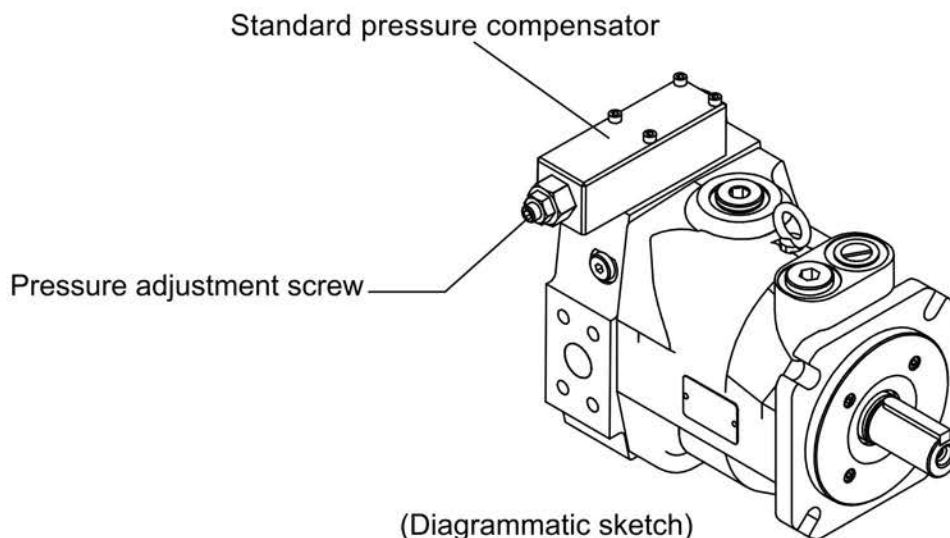



A0 Standard pressure compensator

The standard pressure compensator adjusts the pump displacement according to the actual need of the system in order to keep the pressure constant.

As long as the system pressure at outlet port P is lower than the set pressure (set as spring preload of the compensator spring) the working port A of the compensator valve is connected to the case drain and the piston area is unloaded. Bias spring and system pressure on the annulus area keep the pump at full displacement.


When the system pressure reaches the set pressure the compensator valve spool connects port P1 to A and builds up a pressure at the servo piston resulting in a downstroking of the pump.

The displacement of the pump is controlled in order to match the flow requirement of the system.

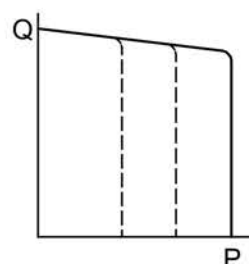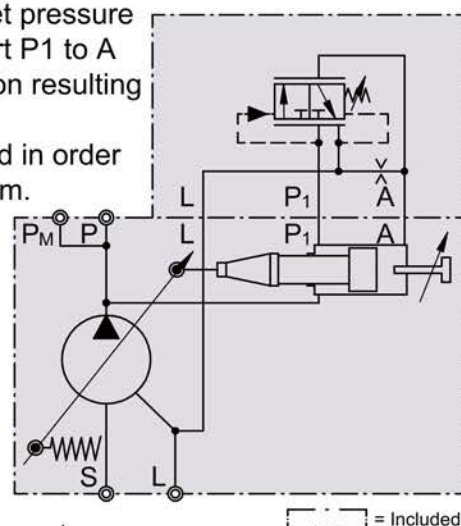




LN None pressure compensator (fixed displacement) (pressure protection required)

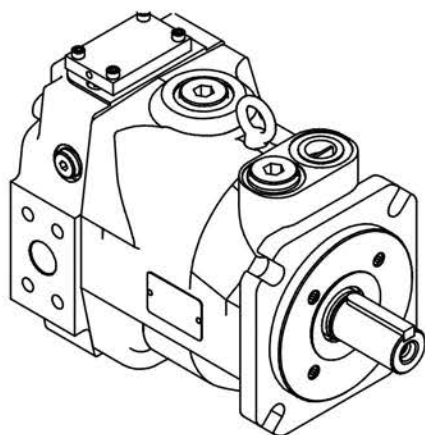

(Diagrammatic sketch)

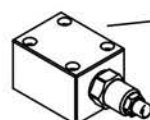



External pressure
protection
Relief valve(additional)

LN None pressure compensator
(fixed displacement) (pressure protection required)

By using the system under stable displacement and pressure situation, standard pressure compensator can be omitted which helps cost down.

Notice:

External pressure protection is necessarily added at port PM to limit the pressure; otherwise the system pressure will be over high .

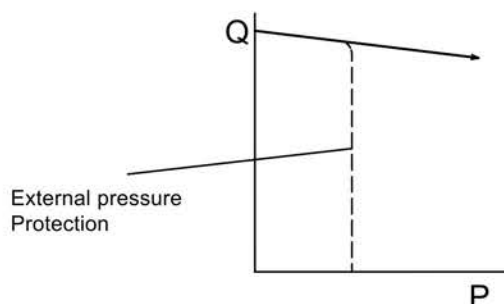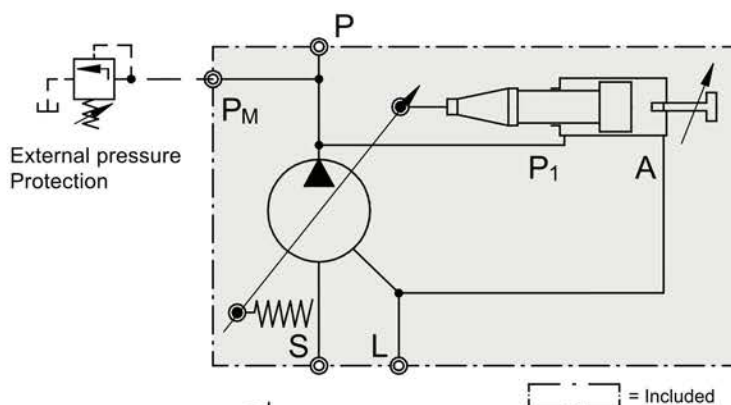


LS Electrical 2-stage flow compensator (pressure protection required)

A

11

PV/Axial piston pump

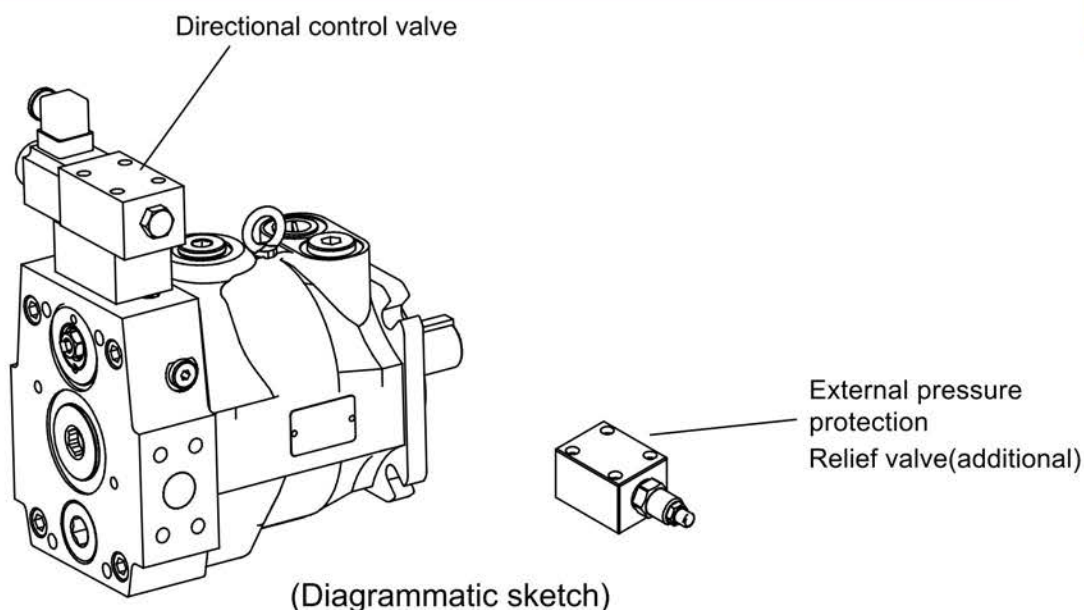


LS Electrical 2-stage flow compensator
(pressure protection required)

Control the hydraulic circuit change by using directional control valve.

LS control is applied to two-stage stroke and different speed system.

Notice:

External pressure protection is necessarily added at port PM to limit the pressure; otherwise the system pressure will be over high.

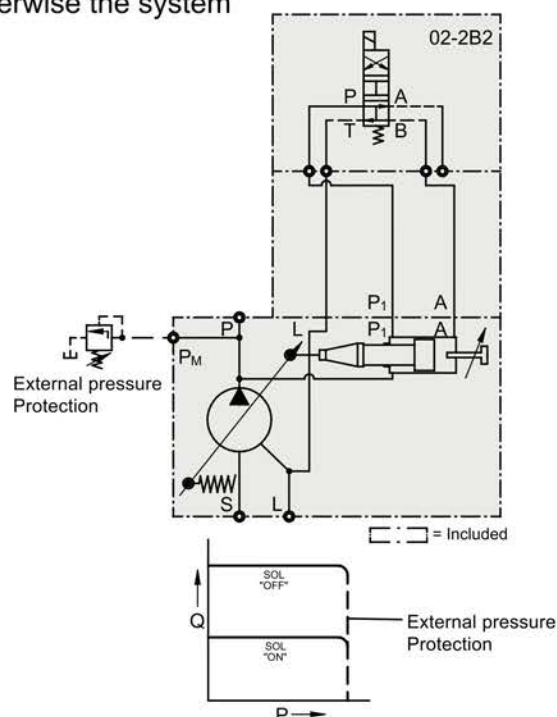




LC Fixed displacement 2-stage flow compensator (pressure protection required)

A

12

PV Axial piston pump

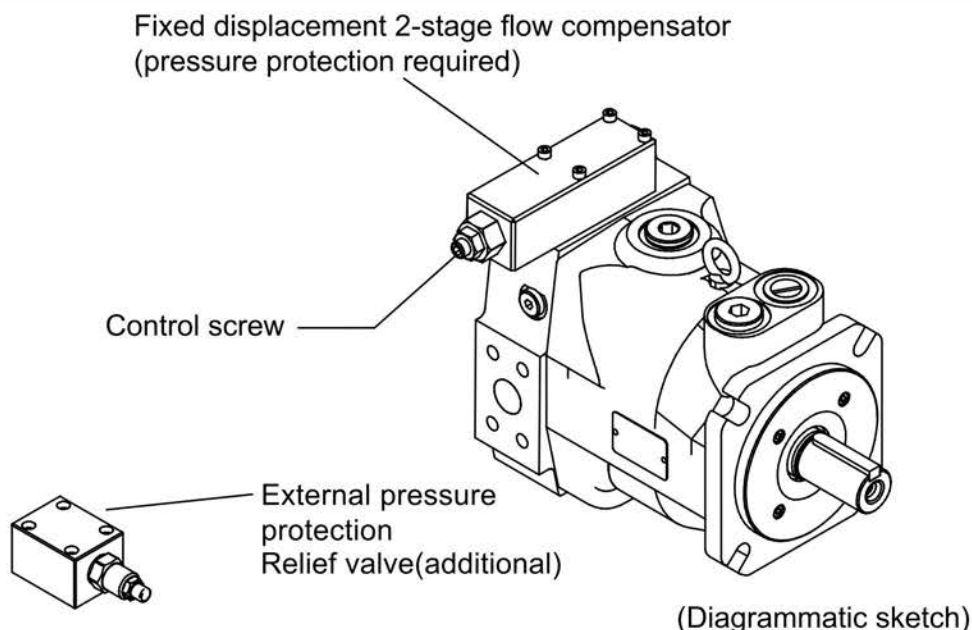


LC Fixed displacement 2-stage flow compensator (pressure protection required)

Control the hydraulic circuit change by using the system pressure setting to achieve the switch of big and small flow.


LS control is applied to two-stage stroke and different speed system.

Notice:

External pressure protection is necessarily added at port PM to limit the pressure; otherwise the system pressure will be over high.

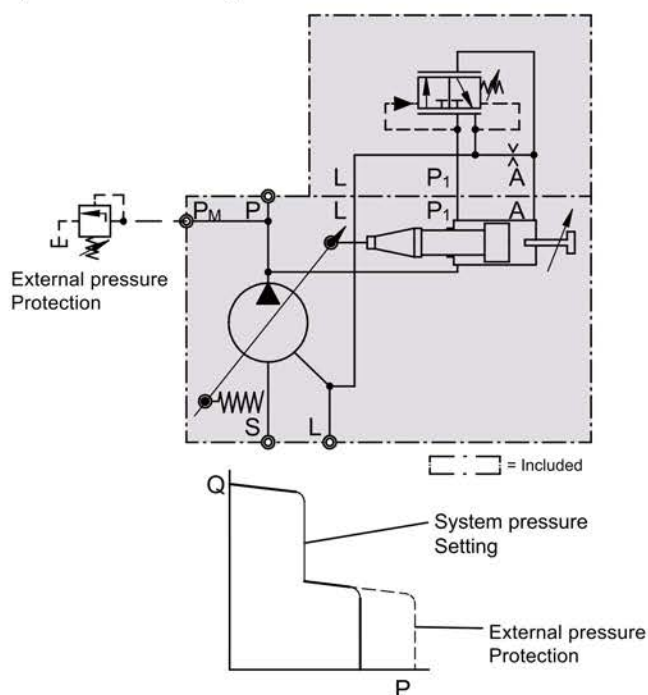

Remote pressure compensator with NG6 interface

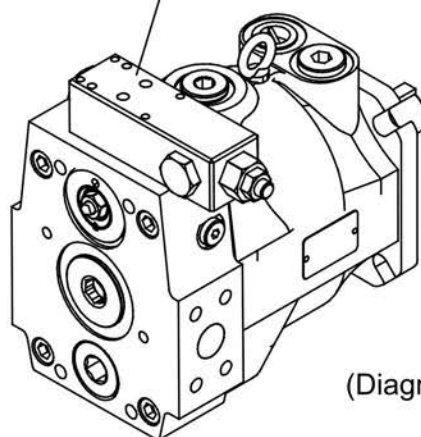

(Diagrammatic sketch)

GM Remote pressure compensator with NG6 interface



Version GM of the remote pressure compensator provides on its top side an interface NG6, DIN24340 (CETOP 03 at RP35H, NFPA D03).

This interface allows a direct mounting of a pilot valve. Beside manual or electrohydraulic operated valves, it is also possible to mount complete multiple pressure circuits directly on the compensator body.

YEOSHE offers a variety of these compensator accessories ready to install.

All remote pressure compensator have a factory setting of 15 bar differential pressure.

With this setting, the controlled pressure at the pump outlet is higher than the pressure controlled by the pilot valve.

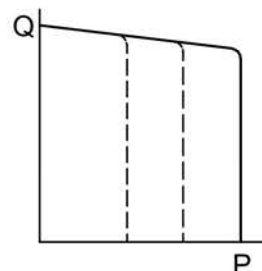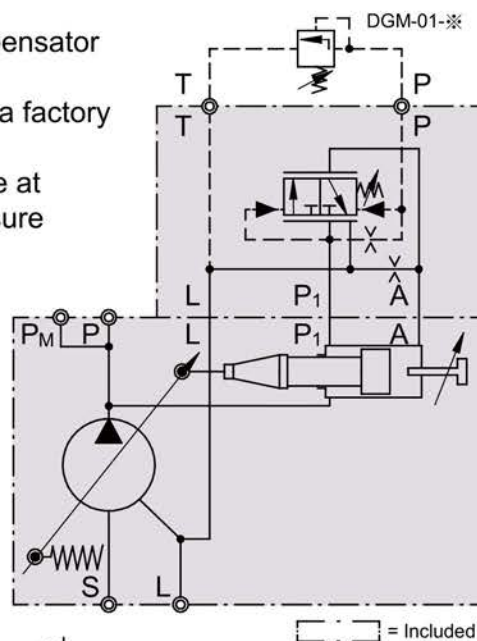


GA Remote pressure compensator + Relief valve



A

14

PV Axial piston pump

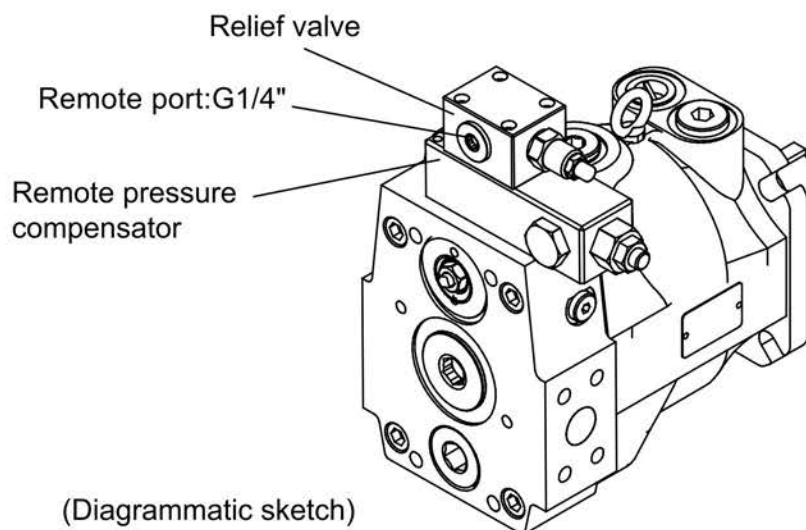


GA Remote pressure compensator + Relief valve

The pressure is set directly at the compensator spring, and the setting of remote pressure compensator can be achieved by any suitable pilot pressure valve connected to pilot port PP.

The pilot valve can be installed remote from the pump in some distance.

That allows pressure setting, e.g. from the control panel of the machine. The pilot flow supply is internal through the valve spool, and the pilot flow is 1~1.5 L/min.

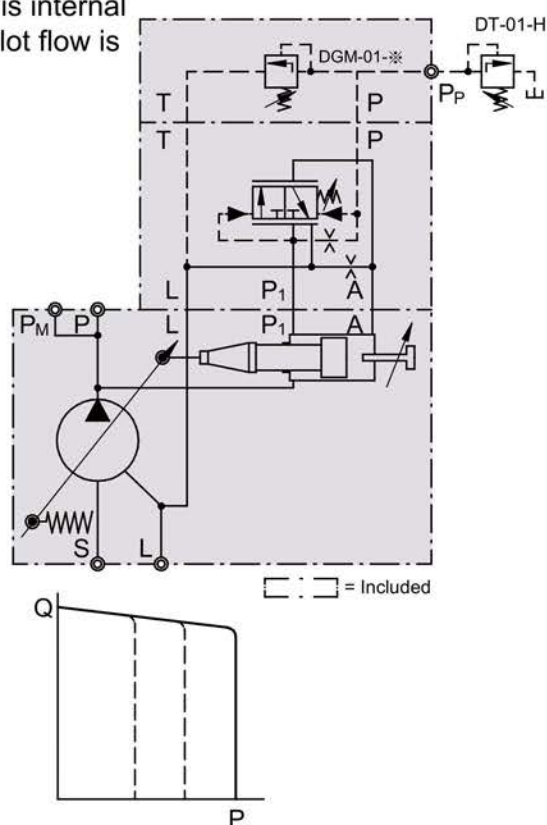


GJ Remote pressure compensator + Proportional pressure valve

A

15

PV Axial piston pump


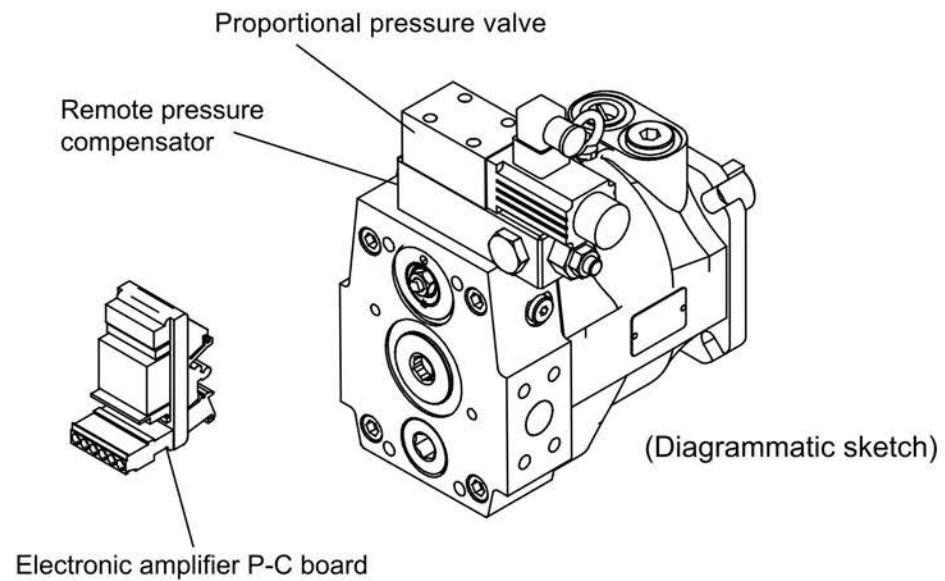



GJ Remote pressure compensator + Proportional pressure valve

Fulfill the actual displacement and maintain the preset system pressure.

By adding YEOSHE proportional pressure valve, electrical proportional pressure control is available.

- ※ Proportional pressure max.250 bar.
If needing any other pressure range,
please contact YEOSHE.

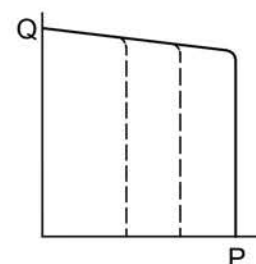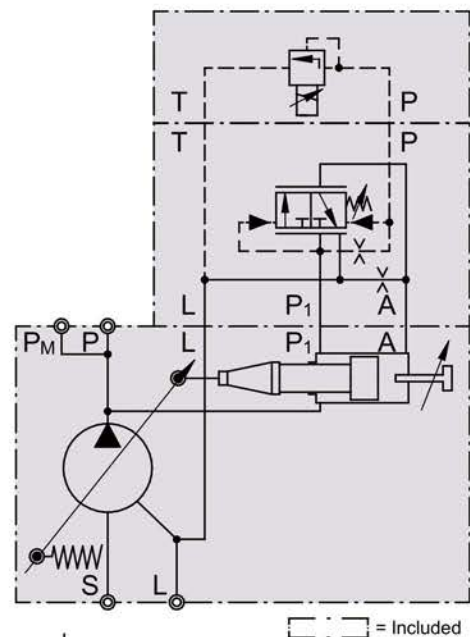

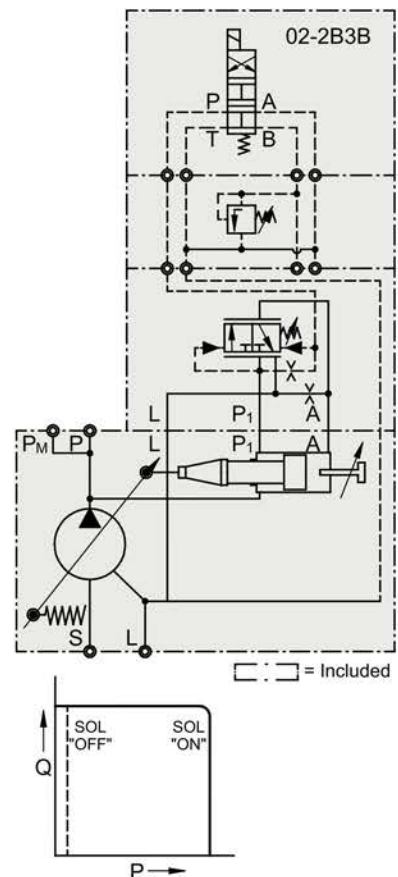


GB Remote pressure compensator + 2-stage pressure control

A

17


PV Axial piston pump

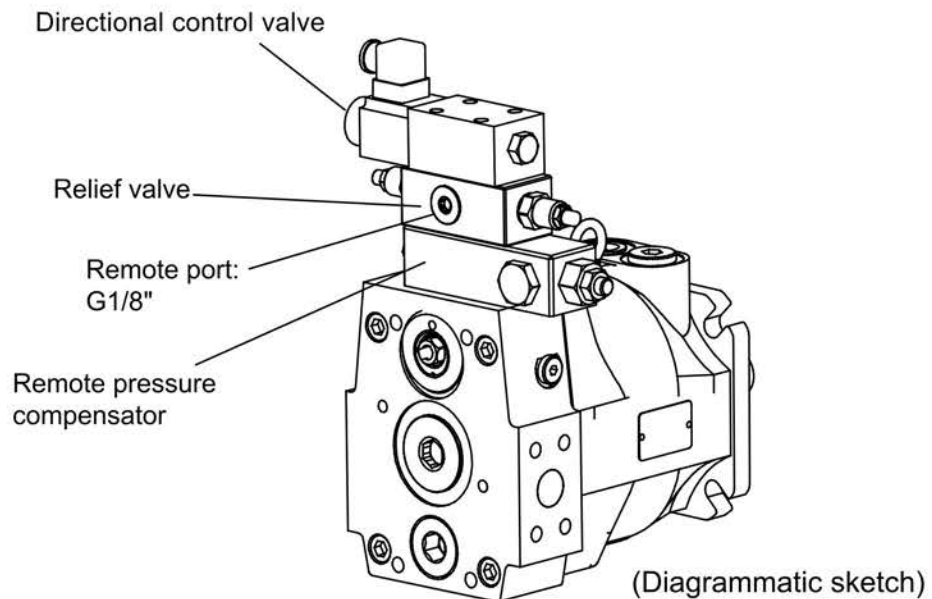

GB Remote pressure compensator + 2-stage pressure control

By adding a relief valve and directional control valve on the compensator makes it adjust two different stage limited pressure.

GB control is for two-stage working pressure under the constant cylinder speed.

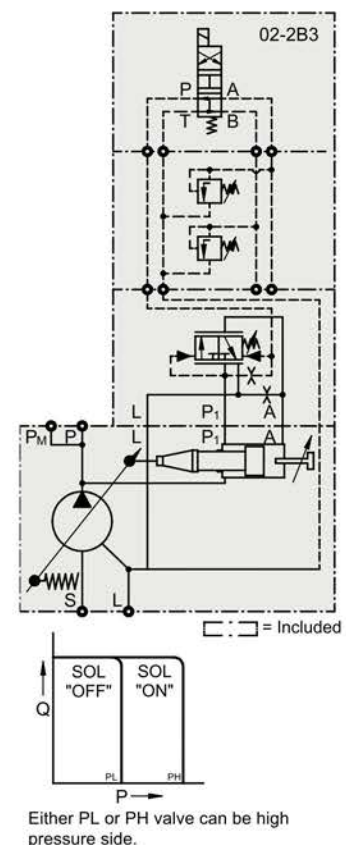




GC Remote pressure compensator + Electrical unloading + 2-stage pressure control

A

18

PV Axial piston pump

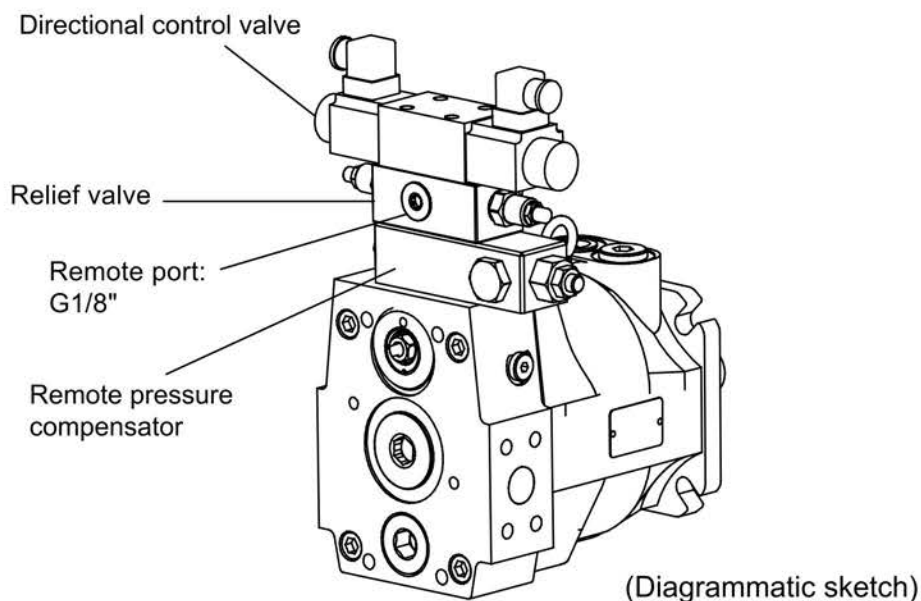


GC Remote pressure compensator + Electrical unloading + 2-stage pressure control


Control two different-stage limited pressure by adding directional control valve, and unloading function.

When the system stops, oil temperature and noise maintain low level by unloading function.

Usable for stable cylinder speed, two-stage pressure, and long unloading situation.

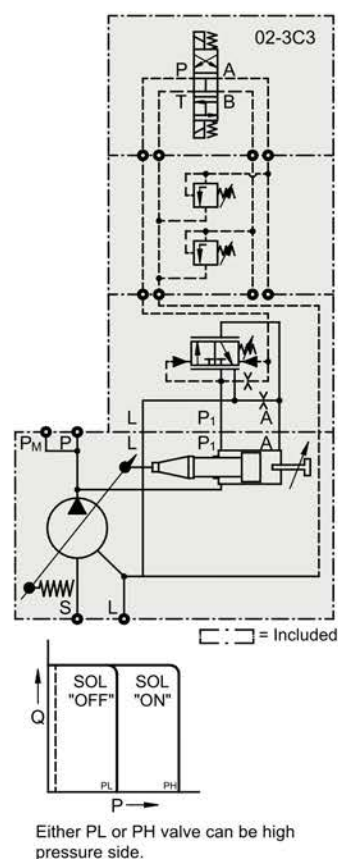

Load-sensing compensator with NG6 interface

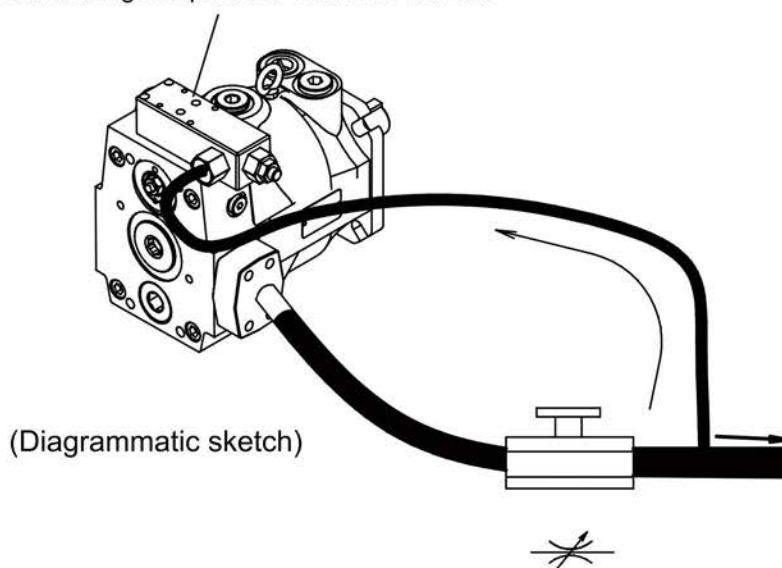

HM Load-sensing compensator with NG6 interface

Version HM of remote pressure compensator provides an interface NG6 on its top side.

The load-sensing compensator has an external pilot pressure supply.


Factory setting for the differential pressure is 10 bar.

The input signal to the compensator is the differential pressure at the main stream resistor.

A load-sensing compensator represents mainly a flow control for the pump output flow, because the compensator keeps the pressure drop at the main stream resistor constant.

A variable input speed or a varying load (-pressure) has consequently no influence on the output flow of the pump and the speed of the actuator.


By adding YEOSHE proportional pressure valve, electrical proportional pressure control is available.

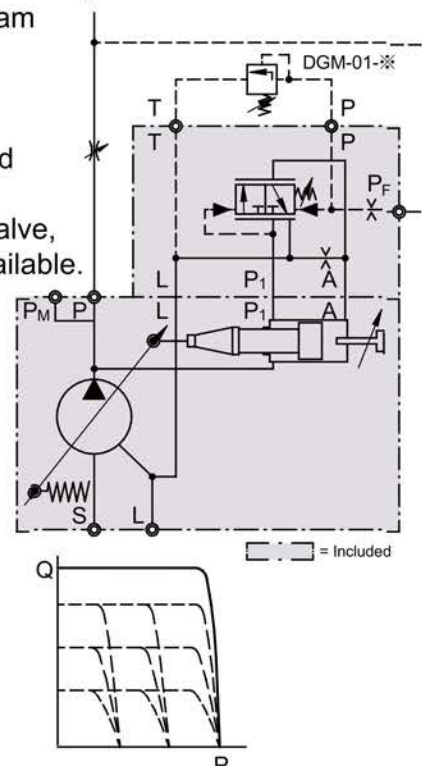

HA Load-sensing compensator + Relief valve

A

PV Axial piston pump

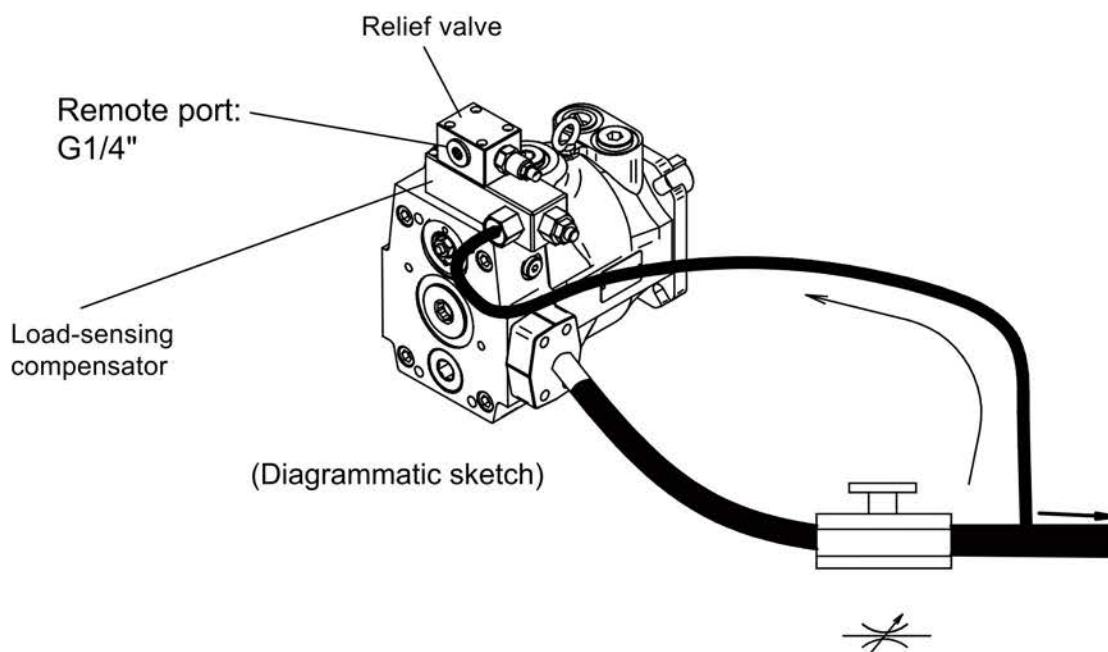

HA Load-sensing compensator + Relief valve

The load-sensing compensator has an external pilot pressure supply.

Factory setting for the differential pressure is 10bar.

The input signal to the compensator is the differential pressure at the main stream resistor.

A load-sensing compensator represents mainly a flow control for the pump output flow, because the compensator keeps the pressure drop at the main stream resistor constant.


A variable input speed or a varying load(-pressure) has consequent no influence on the output flow of the pump and the speed of the actuator.

Relief valve has adjustment function.


The pilot valve can be installed remote from the pump in some distance.

That allows pressure setting, e.g.

form the control panel of the machine. The pilot flow supply is internal through the valve spool, and the pilot flow is 1-1.5 L/min.

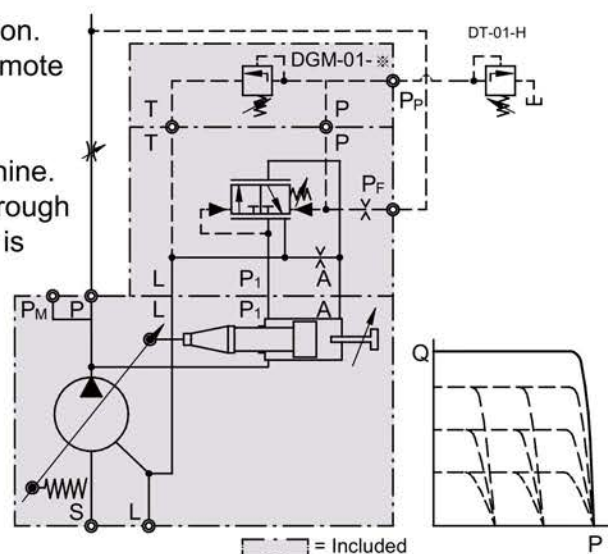

HR Load-sensing compensator + Electrical unloading

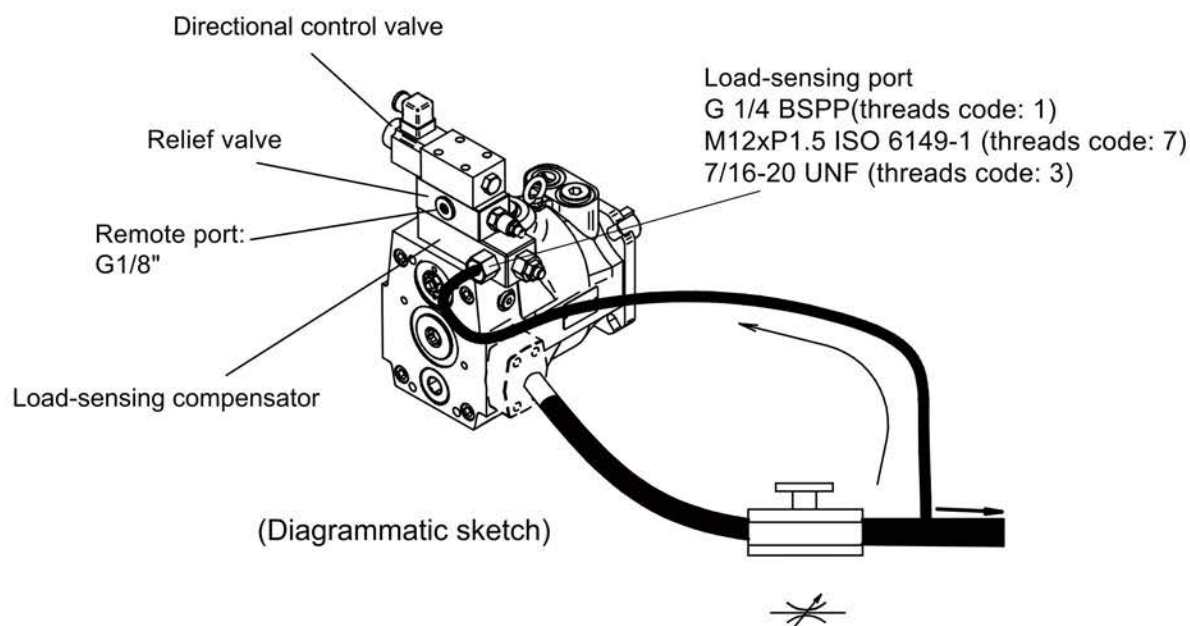

HR Load-sensing compensator + Electrical unloading

The load-sensing compensator has all external pilot pressure supply.

Factory setting for the differential pressure is 10bar.

The input signal to the compensator is the differential pressure at the main stream resistor.

A load-sensing compensator represents mainly a flow control for the pump output flow, because the compensator keeps the pressure drop at the main stream resistor constant.


A variable input speed or a varying (load -pressure) has consequently on the output flow of the pump and speed of the actuator.

By adding a pilot orifice ($\Phi 0.8\text{mm}$) and a pressure pilot valve pressure compensation can be added to the flow control function. See the circuit diagram left.

By adding a relief valve and a directional control valve on the compensator makes the pump have both function.


HR control is for long unloading situation.

When the system stops, oil temperature and noise maintain low level while being through the unloading.

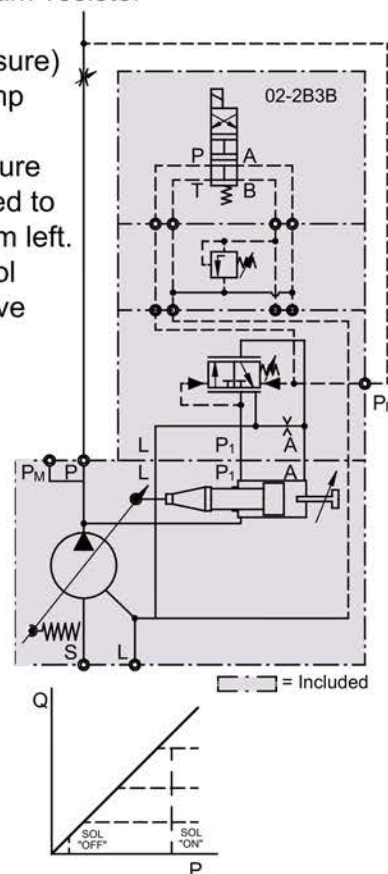



HC Load-sensing compensator + Electrical unloading + 2-stage pressure control

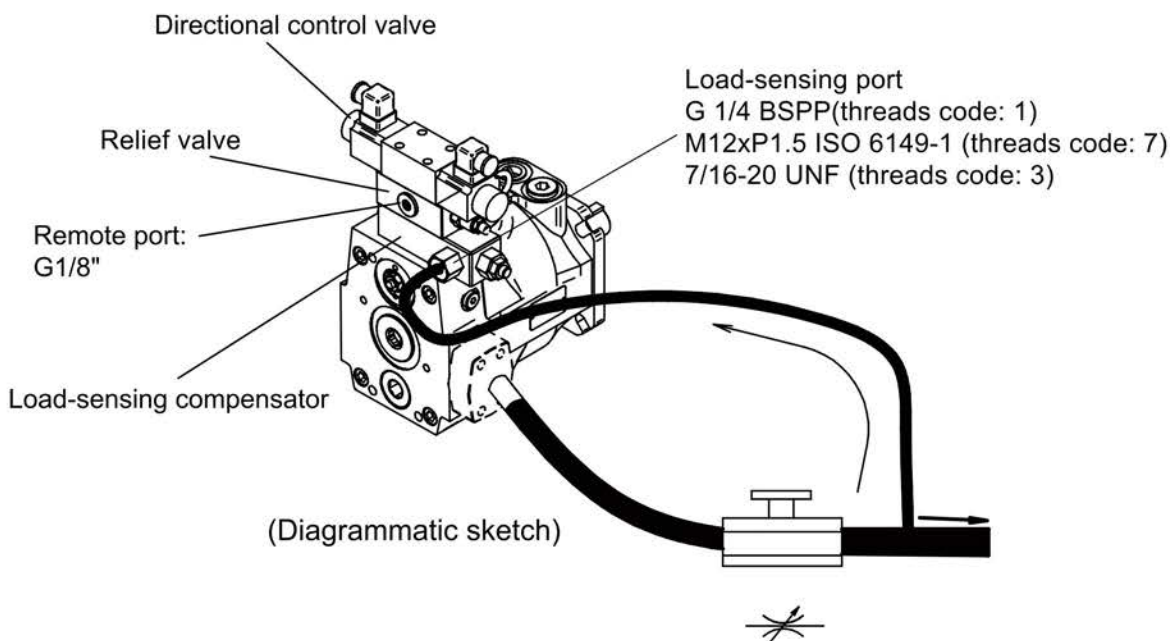

HC Load-sensing compensator + Electrical unloading + 2-stage pressure control

The load-sensing compensator has an external pilot pressure supply. Factory setting for the differential pressure is 10bar.

The input signal to the compensator is the differential pressure at the main stream resistor.

A load-sensing compensator represents mainly a flow control for the pump output flow, because the compensator keeps the pressure drop at the main stream resistor constant.

A variable input speed or a varying (load -pressure) has consequently on the output flow of the pump and speed of the actuator.


By adding a pilot orifice ($\Phi 0.8\text{mm}$) and a pressure pilot valve pressure compensation can be added to the flow control function.

See the circuit diagram left.


By adding a relief valve and a directional control valve on the compensator makes the pump have both function.

HC control is for long unloading situation.

When the system stops, oil temperature and noise maintain low level while being through the unloading.

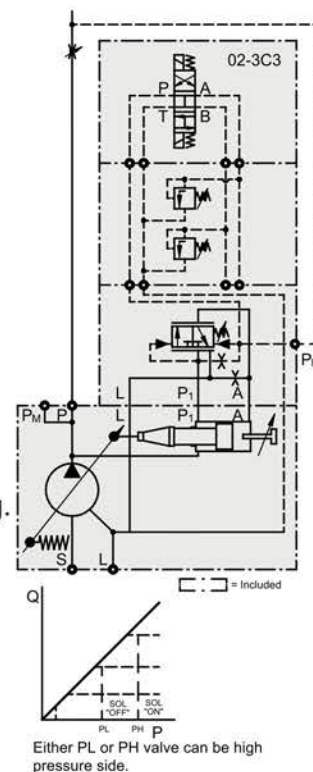

HQ Load-sensing compensator + Proportional flow valve **YEOSHE** valve + Relief valve

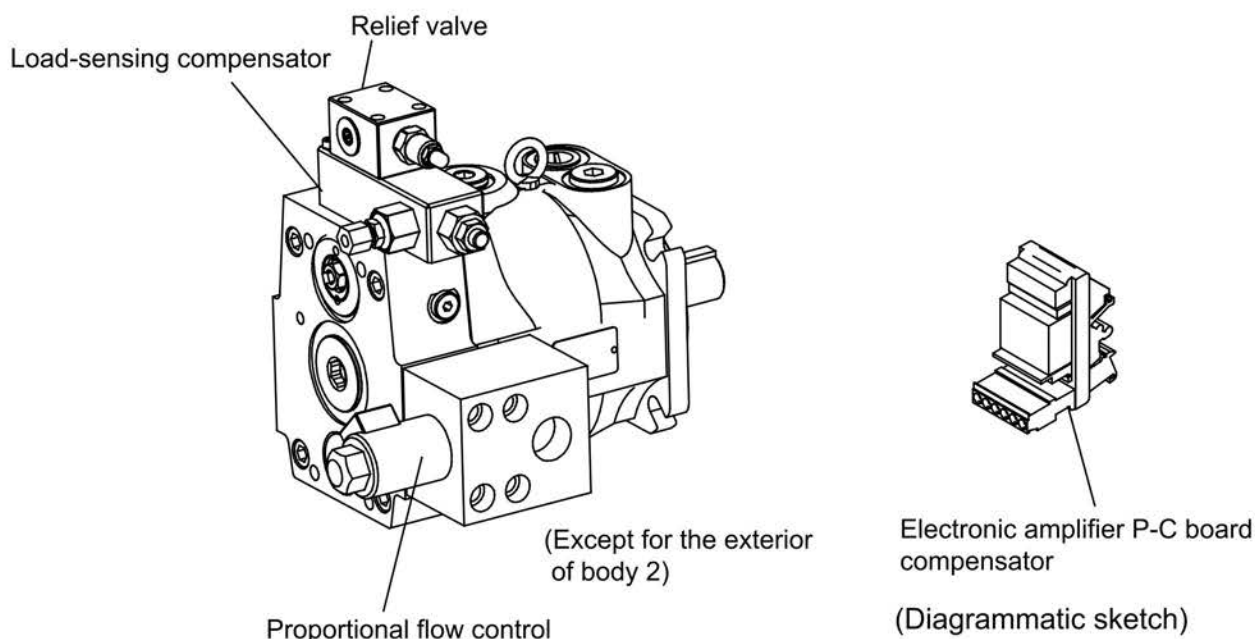

HQ Load-sensing compensator + Proportional flow valve + Relief valve



The load-sensing compensator has an external pilot pressure supply.

Factory setting for the differential pressure is 10bar.

The input signal to the compensator is the differential pressure at the main stream resistor.

A load-sensing compensator represents mainly a flow control for the pump output flow, because the compensator keeps the pressure drop at the main stream resistor constant.

By adding YEOSHE proportional flow valve, electrical proportional flow control is available.

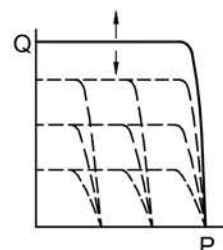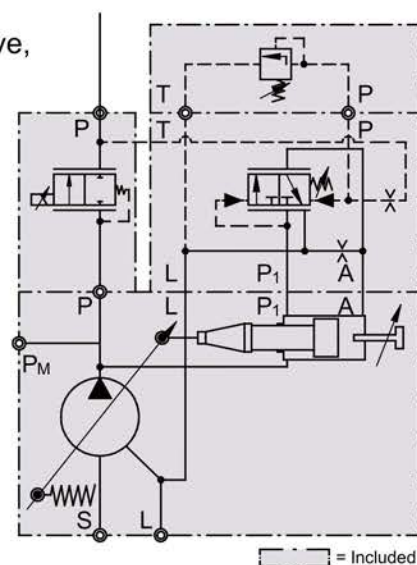




HK Load-sensing compensator + Proportional pressure valve + Proportional flow valve

A

26

PV Axial piston pump

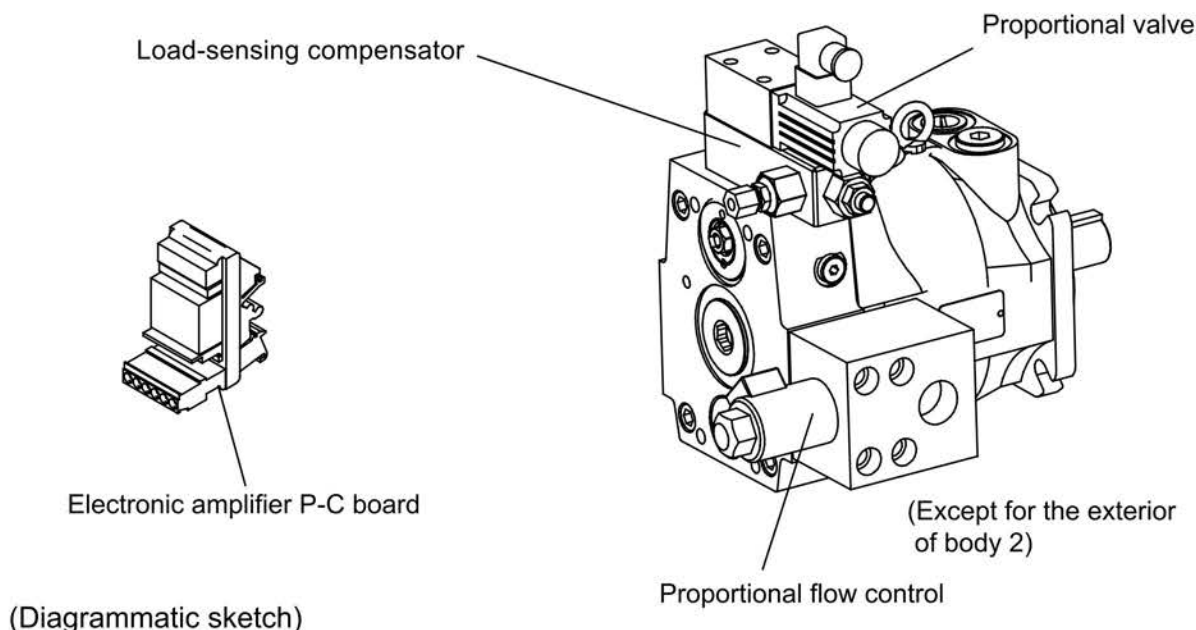

HK Load-sensing compensator + Proportional pressure valve + Proportional flow valve

HK is for saving energy.

It offers the smallest pressure and flow according to the different requirement.

The displacement is nearly zero when the system stands by, and the motor output is also nearly zero.

When the system reaches setting pressure, the pump displacement will reduce by itself.

It only needs to add the system required flow, and the pressure remains the same which control the oil temperature.

Compared with vane pump, gear pump + PQ valve can save 30%-50% energy.

The load-sensing compensator + proportional flow valve has all external pilot pressure supply.

Factory setting for the differential pressure is 10 bar.



The input signal to the compensator is the differential pressure at the main stream resistor.

A load-sensing compensator represents mainly a flow control for the pump output flow of the pump and the speed of the actuator.


Proportional pressure valve is for electrical proportional pressure control.

※ Proportional pressure max.250 bar.

If needing any other pressure range, please contact YEOSHE.

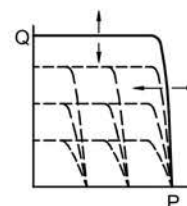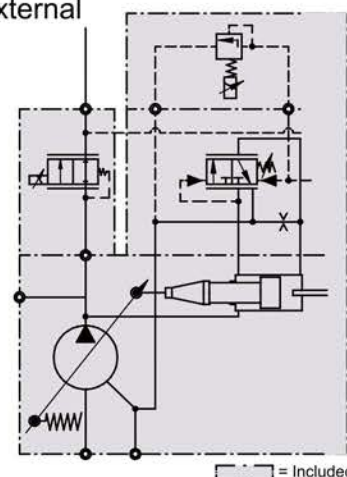

BQ None-stage flow compensator (Cylinder)

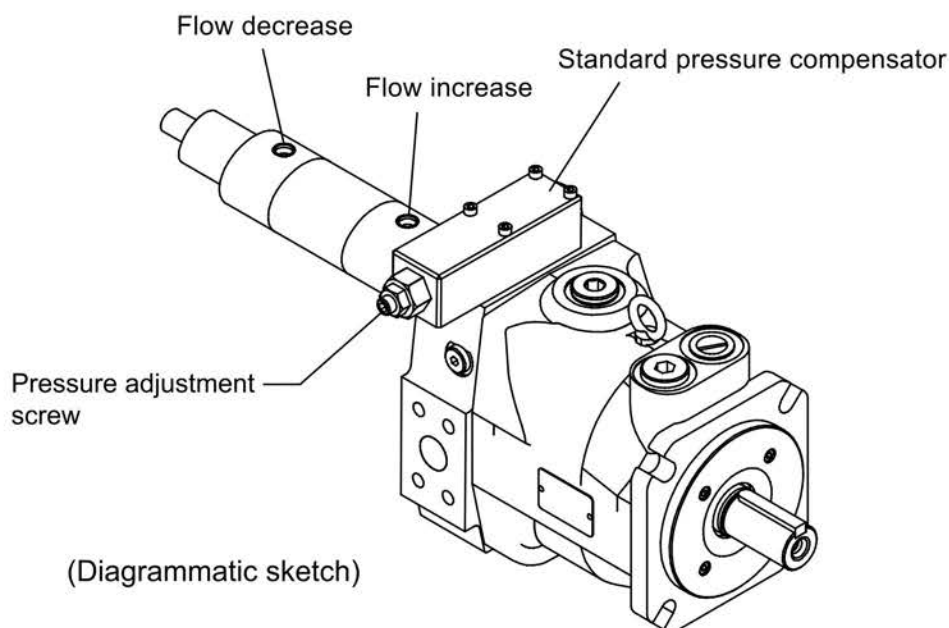


None-stage flow compensator (Cylinder)

Using added cylinder, external pilot pressure controls the forward and backward, and push the swash plate to change directions and make the single-stage pressure control.

Displacement can be zero to Max, and pressure remains on setting pressure. Automatus flow control is much easier to repair, and cheaper than electrical proportional flow control.


External control is more automated by using solenoid valve or hydraulic directional valve.

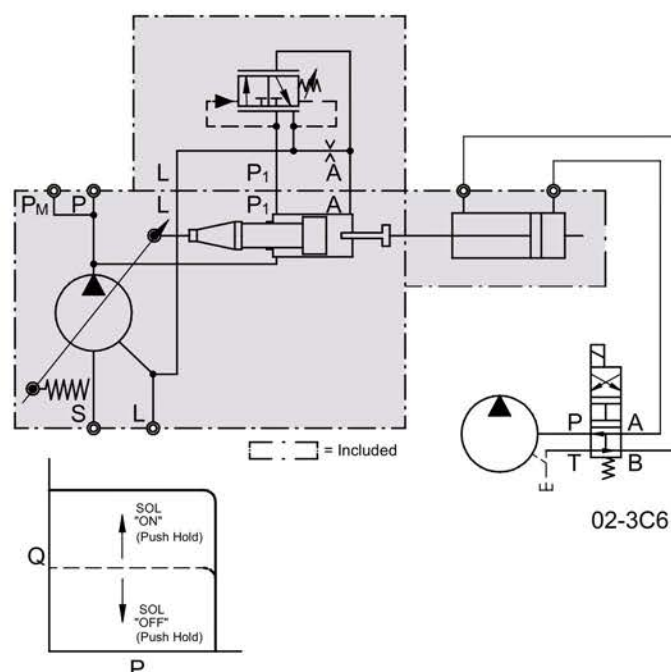



VM 2-valve load-sensing compensator with NG6 interface

2-valve Load-sensing compensator with NG6 interface

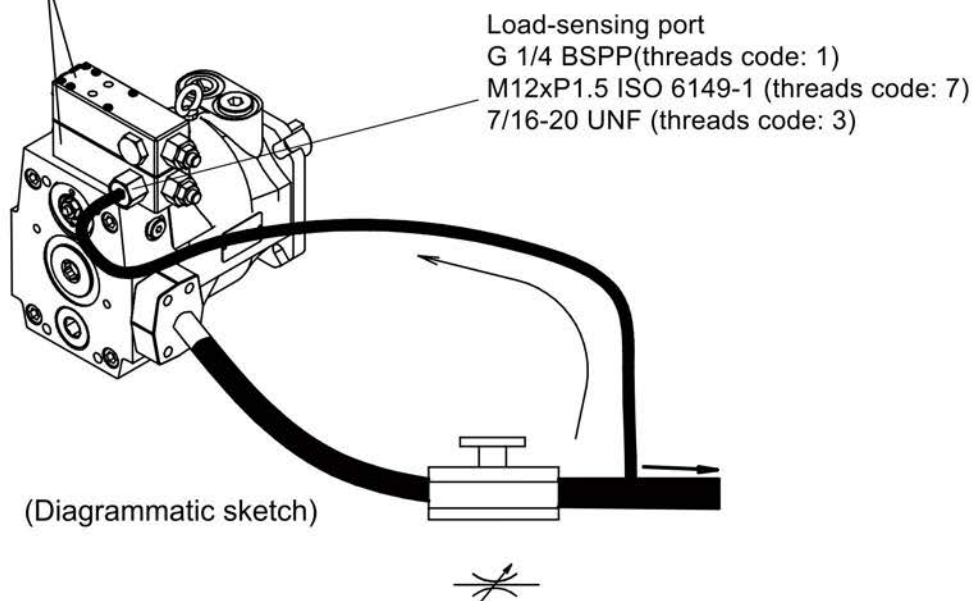


VM 2-valve load-sensing compensator with NG6 interface

VM 2-valve load-sensing compensator with NG6 interface is an option for limiting pressure precisely.


By eliminating the impact between pressure and flow, the pump should add two different valves to control flow and pressure.

Version VM provides on its top side an interface NG6 which has pressure-adjusted function.

If adding a YEOSHE proportional pressure control valve, electrical proportional pressure control is available.

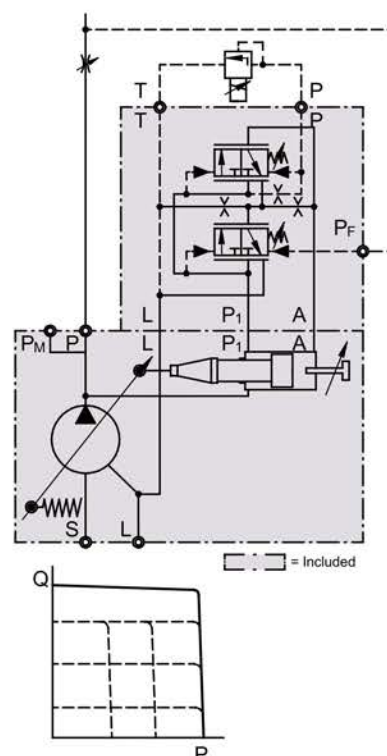

VA 2-valve load-sensing compensator + Relief valve

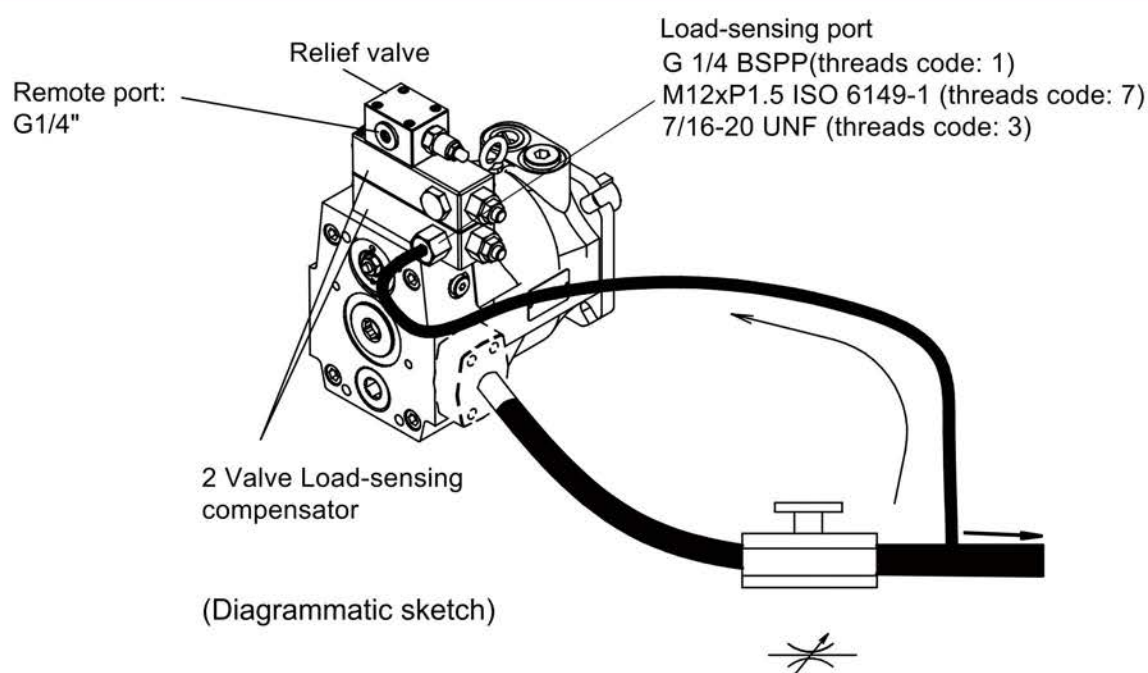

VA 2-valve load-sensing compensator + Relief valve


VA 2-valve load-sensing compensator with NG6 interface is an option for limiting pressure precisely.

By eliminating the impact between pressure and flow, the pump should add two different valves to control flow and pressure.

The pilot valve is free to be installed to remote in some distance.


That allows pressure setting e.g. from the control panel of the machine.

The pilot flow supply is internal through the valve spool, and the pilot flow is 1-1.5 L/min.

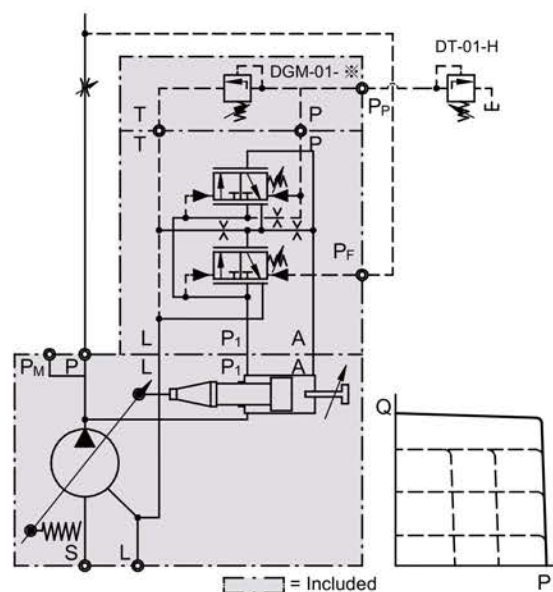



VJ 2-valve load-sensing compensator + Proportional pressure valve

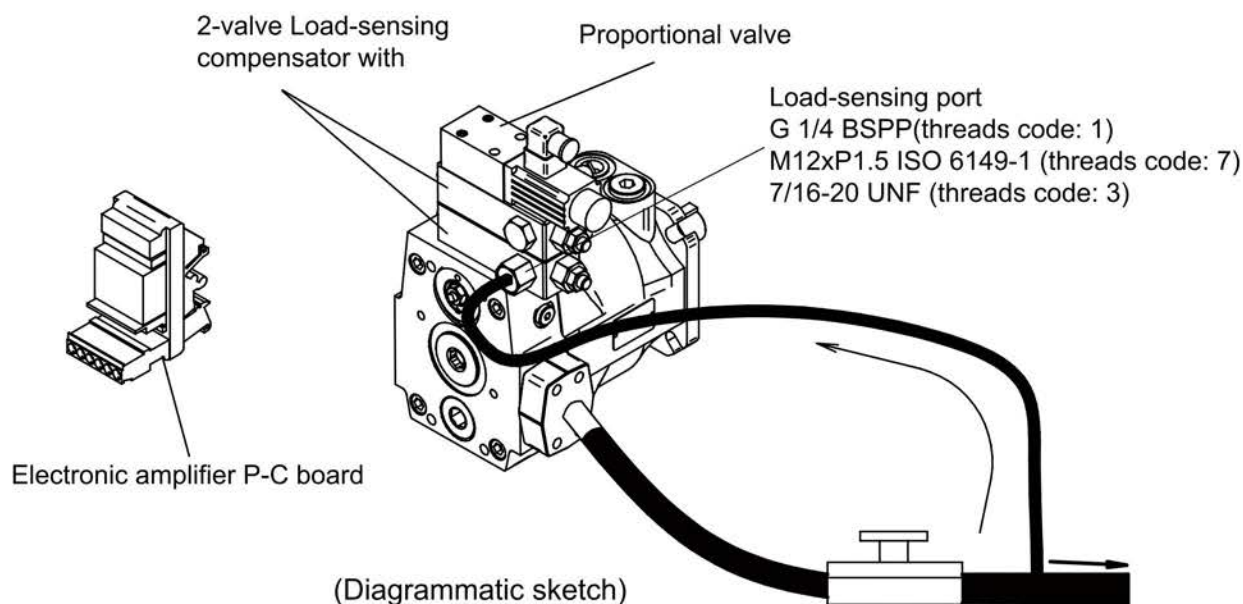


VJ 2-valve load-sensing compensator + Proportional pressure valve

VJ 2-valve load-sensing compensator with NG6 interface is an option for limiting pressure precisely.


By eliminating the impact between pressure and flow, the pump should add two different valves to control flow and pressure.

Electrical proportional and pressure control is available by adding a YEOSHE proportional pressure valve on the Load-sensing compensator.

- ※ Proportional pressure max.250 bar.
If needing any other pressure range,
please contact YEOSHE.

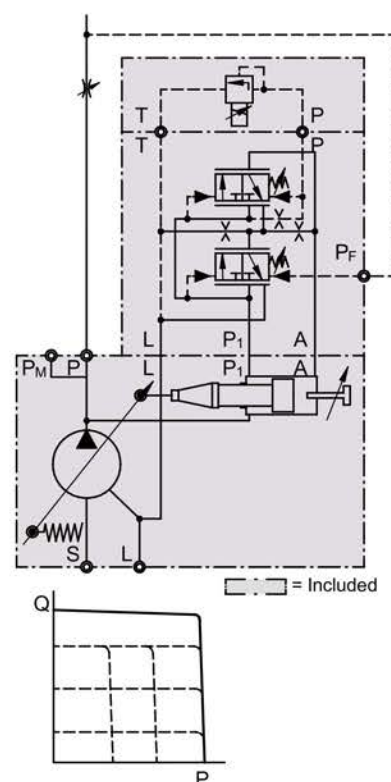

VQ 2-valve load-sensing compensator + Proportional flow valve + Relief valve

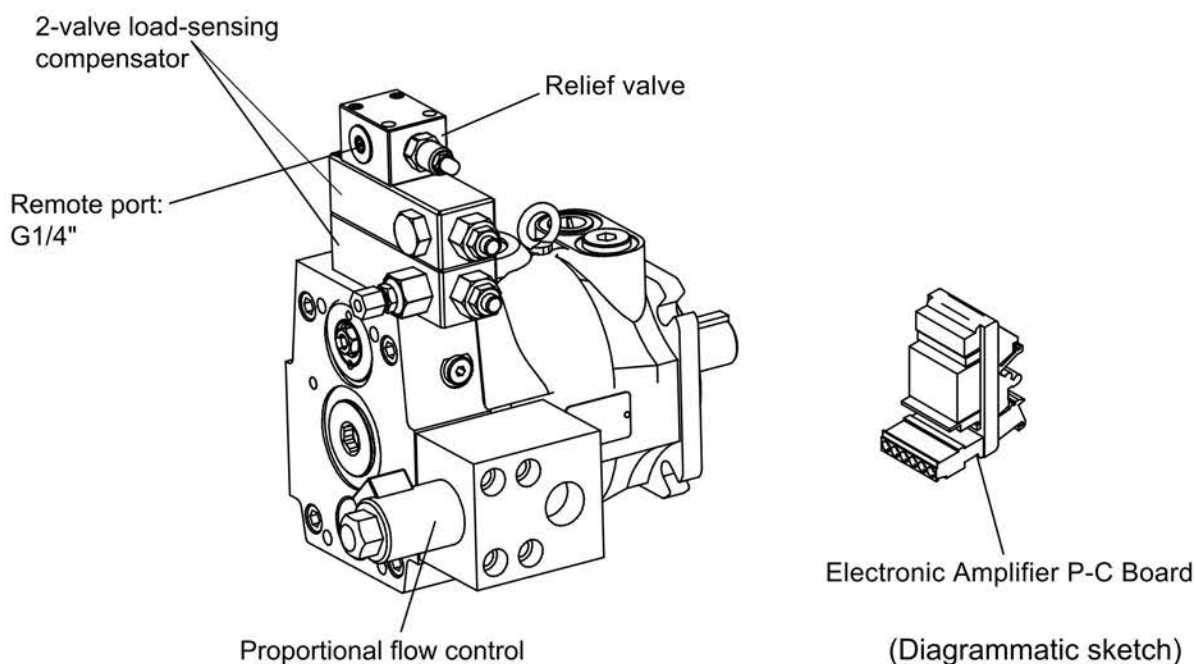

VQ 2-valve load-sensing compensator + Proportional flowvalve + Relief valve

Type VQ is an option for limiting pressure precisely.

The load-sensing compensator has an external pilot pressure supply.


Factory setting for the differential pressure is 10bar.

The input signal to the compensator is the differential pressure at the main stream resistor.

A load-sensing compensator represents mainly a flow control for the pump output flow, because the compensator keeps the pressure drop at the main stream resistor constant.


A variable input speed or a varying load (-pressure) consequently has no influence on the output flow of the pump and the speed of the actuator.

Electrical proportional flow control is available by adding a YEOSHE proportional flow control valve.

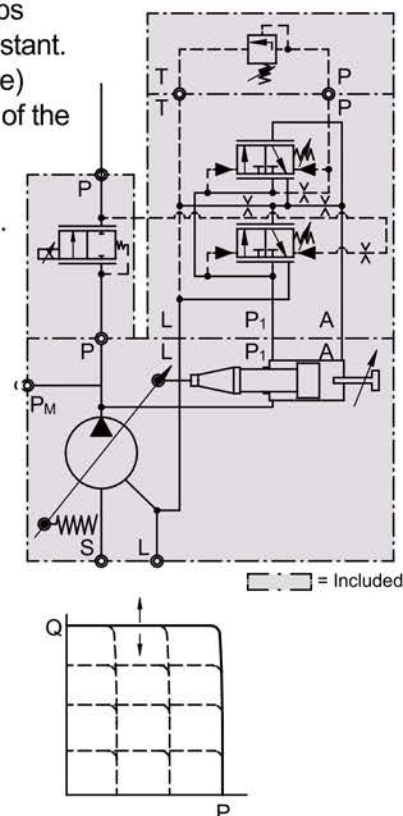



VK 2-valve load-sensing compensator + Proportional pressure valve + Proportional flow valve

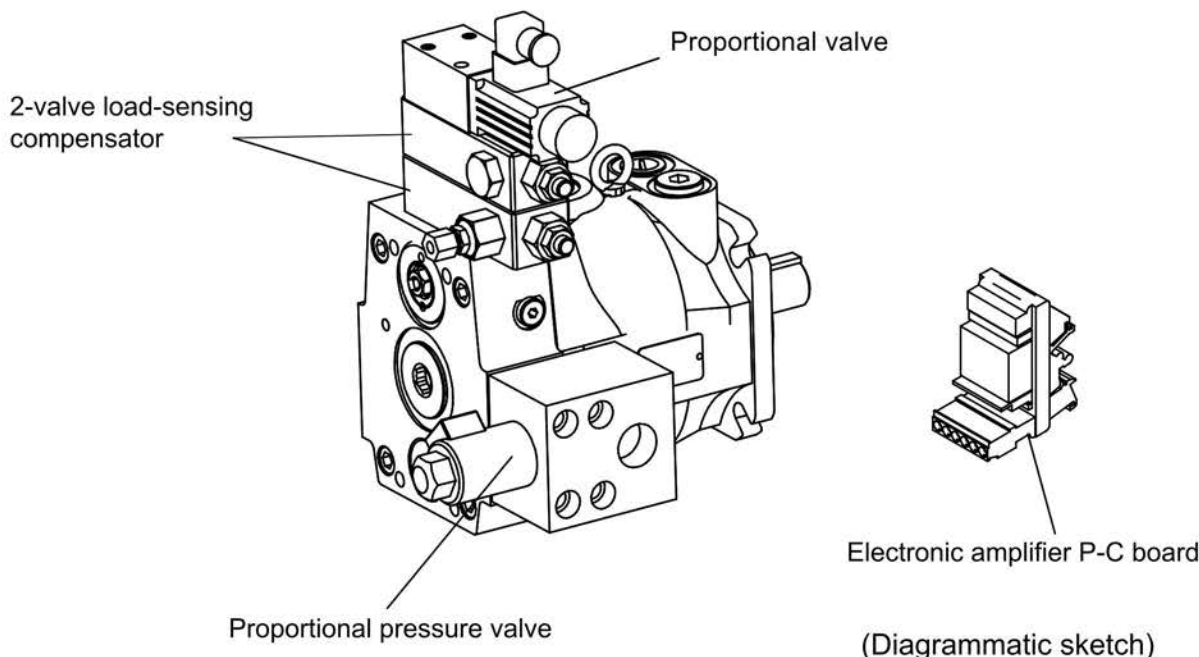

VK 2-Valve load-sensing compensator + Proportional pressure valve + Proportional flow valve

VK control has the same characters as HK control for saving energy. It offers the smallest pressure and flow according to the different request. The displacement is nearly zero when the system stands by, and the motor output is also nearly zero.

When the system reaches setting pressure, the pump displacement will reduce by itself. It only needs to add the system required flow, and the pressure remains the same which control the oil temperature.

Compared with vane pump, gear pump + PQ valve can save 30%-50% energy.

The load-sensing compensator+ Proportional flow valve has external pilot pressure supply.


Factory setting for the differential pressure is 10 bar.

The input signal to the compensator is the differential pressure at the main stream resistor.


A load-sensing compensator represents mainly a flow control for the pump output flow of the pump and the speed of the actuator.

Proportional pressure valve is for electrical proportional pressure control.

- ※ Proportional pressure max.250 bar.
- If needing any other pressure range, please contact YEOSHE.

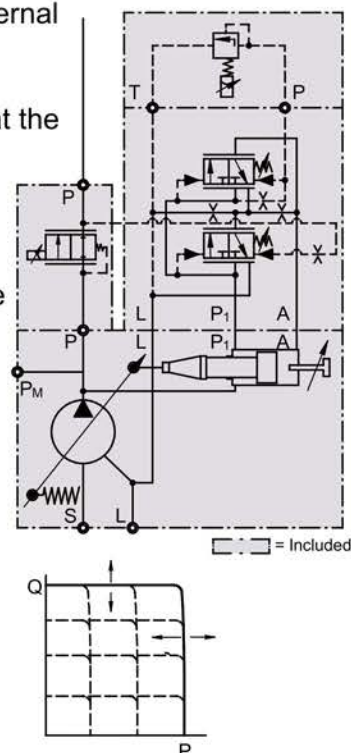

FV 2-valve load-sensing compensator + High reacted proportional flow valve + Flow feed back + Relief valve

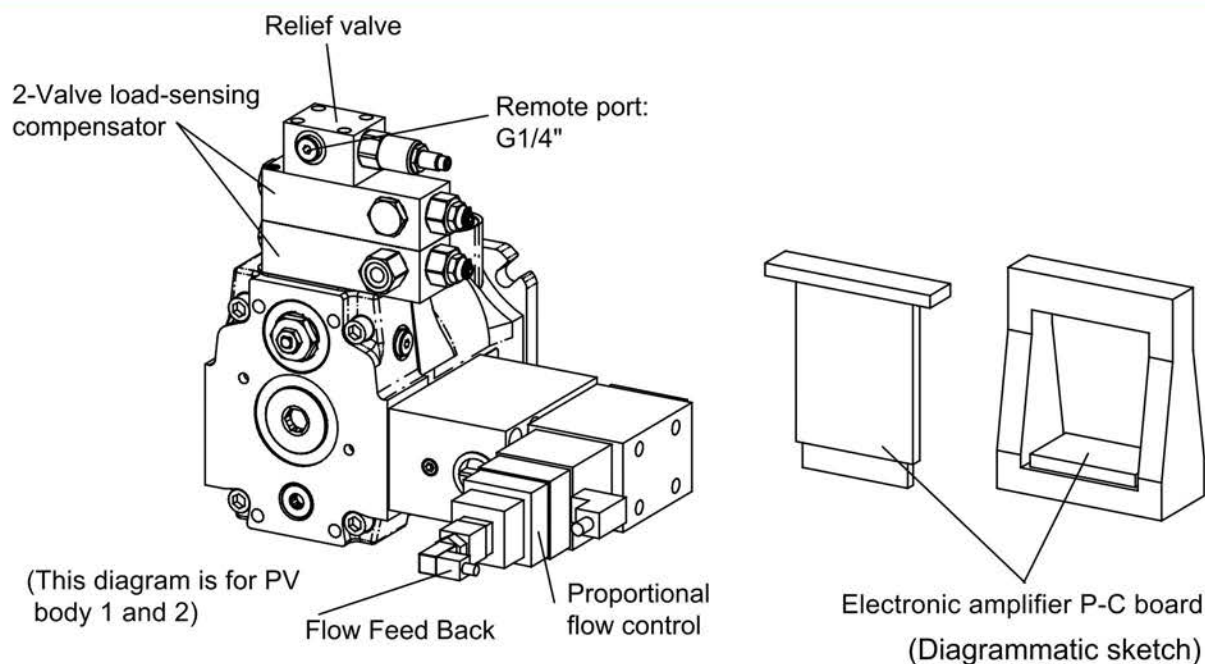


FV 2-valve load-sensing compensator + High reacted proportional flow valve
+ Flow feed back + Relief valve

FV control is an option for limiting pressure precisely.

By eliminating the impact between pressure and flow, the pump should add two different valves to control flow and pressure.


The electrical control permanently compares input command and actual displacement and powers the proportional flow solenoid of the control valve. A deviation from the commanded displacement leads to a modulation of the input current to the solenoid.

The control valve changes the control pressure until the correct displacement is adjusted.

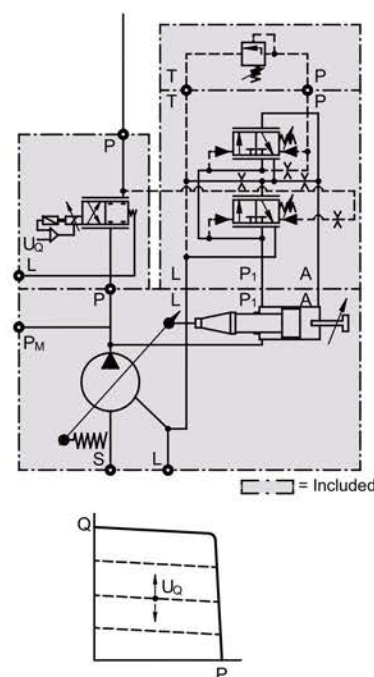



FG 2-valve load-sensing compensator + High reacted proportional flow valve + Proportional pressure + Flow & Pressure feed back

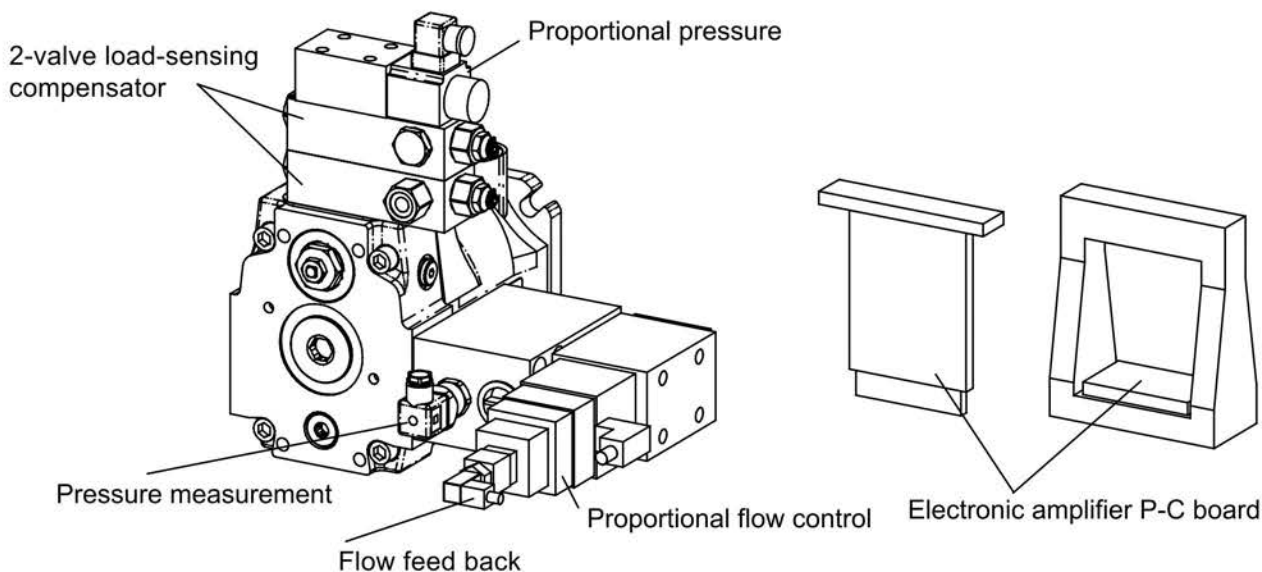

(This diagram is for PV body 1 and 2)

FG 2-valve load-sensing compensator + High reacted proportional flow valve + Proportional pressure + Flow & Pressure feed back

FG control is an option for limiting pressure precisely.

By eliminating the impact between pressure and flow, the pump should add two different valves to control flow and pressure.


By adding a YEOSHE proportional pressure valve, it would be electrical proportional pressure control.


The electrical control permanently compares input command and actual displacement and powers the proportional flow solenoid of the control valve.

A deviation from the commanded displacement leads to a modulation of the input current to the solenoid.

The control valve changes the control pressure until the correct displacement is adjusted.

Adding a pressure sensor achieves pressure feedback control.

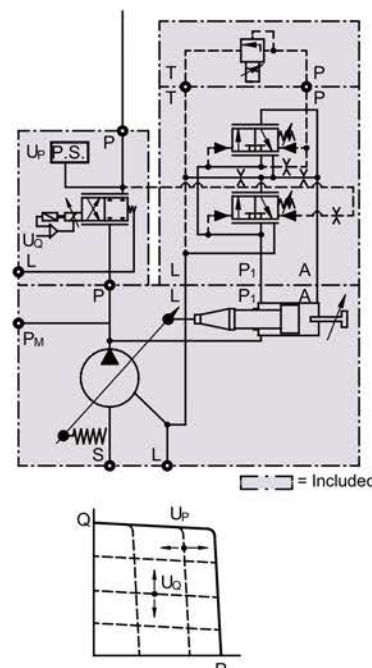

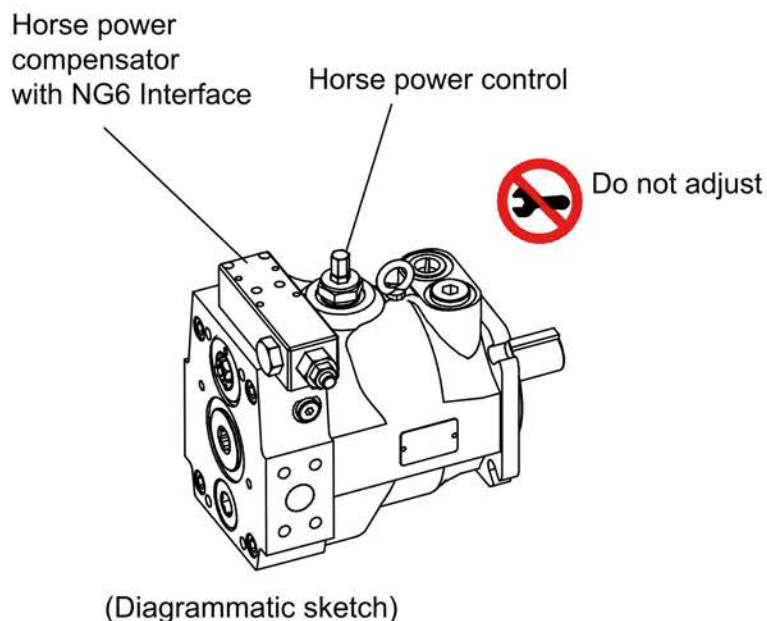

PM Horse power compensator with NG6 interface

The hydraulic-mechanical horse power compensator consists of a modified remote pressure compensator or of a modified load-sensing compensator and a pilot valve.

This pilot valve is integrated into the pump and is adjusted by a cam sleeve.

The cam sleeve has a contour that is designed and machined for the individual displacement and the nominal horse power setting.

At a large displacement the opening pressure (given by the cam sleeve diameter) is lower than at small displacements.


This makes the pump compensate along a constant horse power (torque) curve.

Horse power is optional when order.

Working pressure can be adjusted by adding YEOSHE pressure leading valve.

Adding the proportional pressure valve achieves the electrical proportional pressure control.

※ Horse power setting, please following type code.

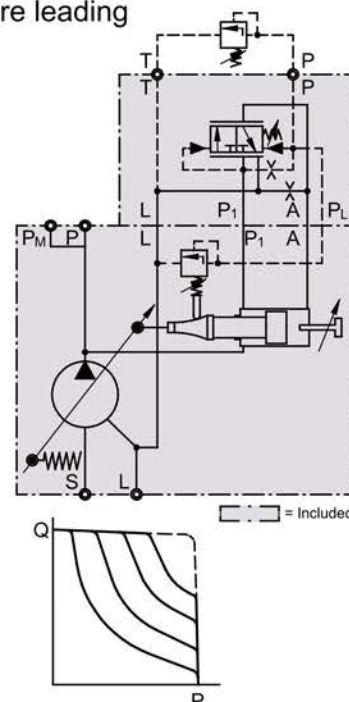


PA Horse power compensator + Relief valve

A

36

PV Axial piston pump

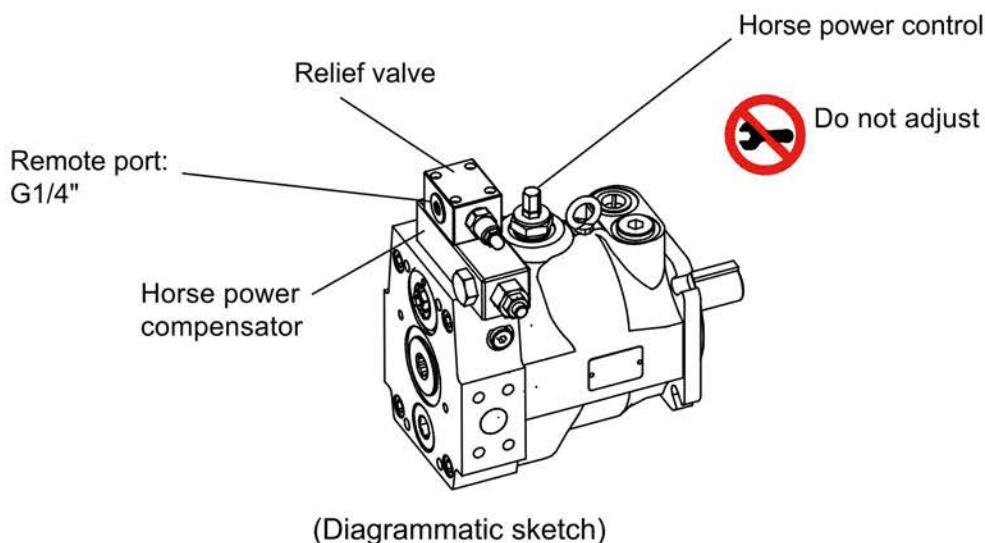

PA Horse power compensator + Relief valve

The hydraulic-mechanical horse power compensator consists of a modified remote pressure compensator or of a modified load-sensing compensator and a pilot valve.

This pilot valve is integrated into the pump and is adjusted by a cam sleeve.

The cam sleeve has a contour that is designed and machined for the individual displacement and the nominal horse power setting.

At a large displacement the opening pressure (given by the cam sleeve diameter) is lower than at small displacements.

This makes the pump compensate along a constant horse power (torque) curve.

Horse power is optional when order.

Working pressure can be adjusted by adding YEOSHE pressure leading valve.


Adding the proportional pressure valve achieves the electrical proportional pressure control.

The pilot valve can be installed remote from the pump in some distance.

That allows pressure setting e.g. from the control panel of the machine.

The pilot flow supply is internal through the valve spool and the pilot flow is 1-1.5 L/min.

※ Horse power setting, please following type code.

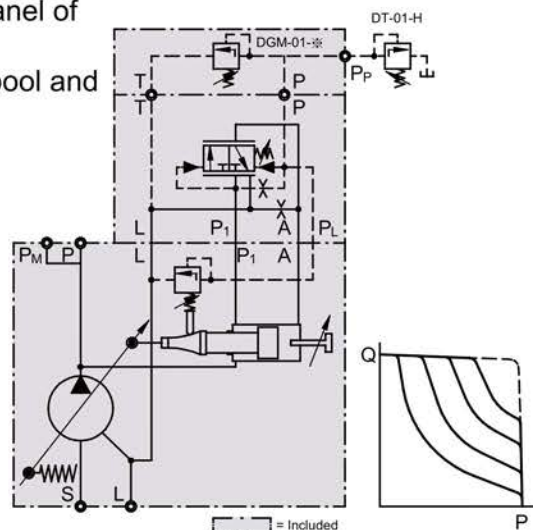


PJ Horse power compensator + Proportional pressure valve

A

37

PV Axial piston pump

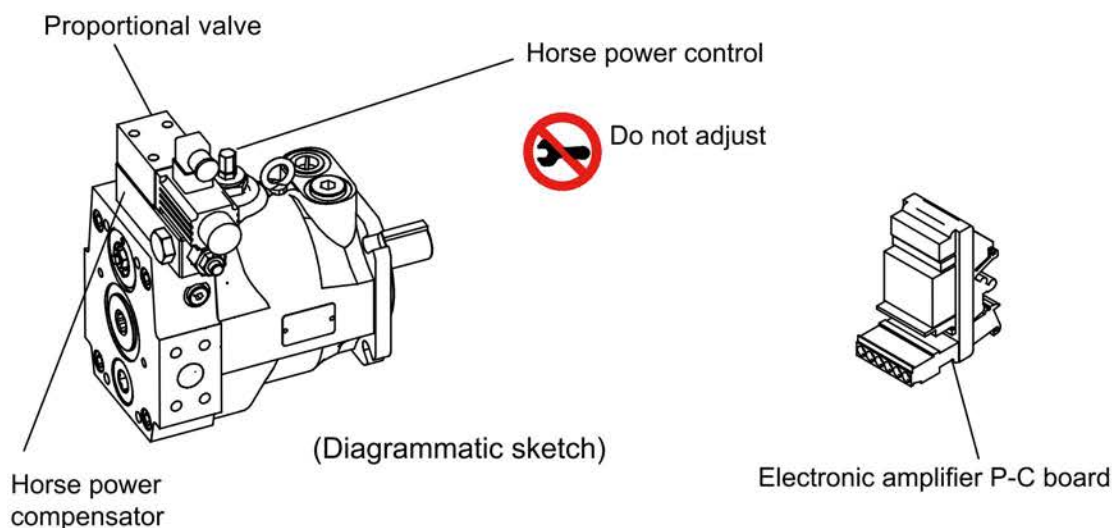

PJ Horse power compensator + Proportional pressure valve

The hydraulic- mechanical horse power compensator consists of a modified remote pressure compensator or of a modified load-sensing compensator and a pilot valve.

This pilot valve is integrated into the pump and is adjusted by a cam sleeve.

The cam sleeve has a contour that is designed and machined for the individual displacement and the nominal horse power setting.


At a large displacement the opening pressure (given by the cam sleeve diameter) is lower than at small displacements.

This makes the pump compensate along a constant horse power (torque) curve.

Pressure-adjusted function is optional by adding a leading proportional pressure valve.

※ Horse power setting, please following type code.

※ Proportional pressure max.250 bar.
If needing any other pressure range,
please contact YEOSHE.

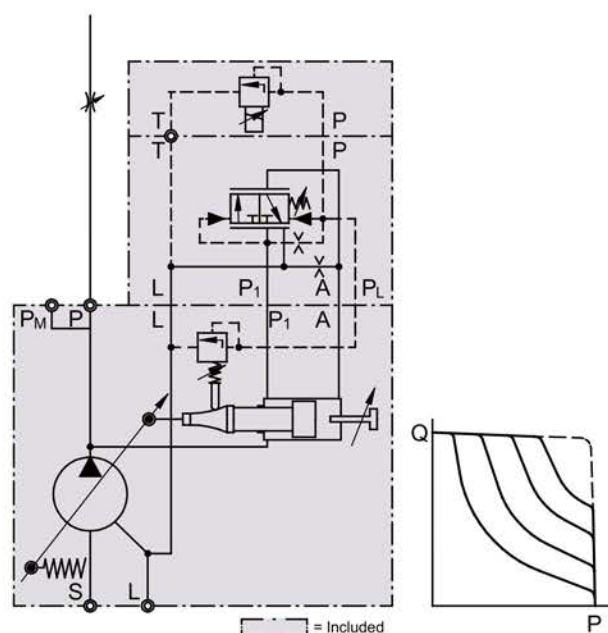


PR Horse power compensator + Electrical unloading



A

38

PV Axial piston pump

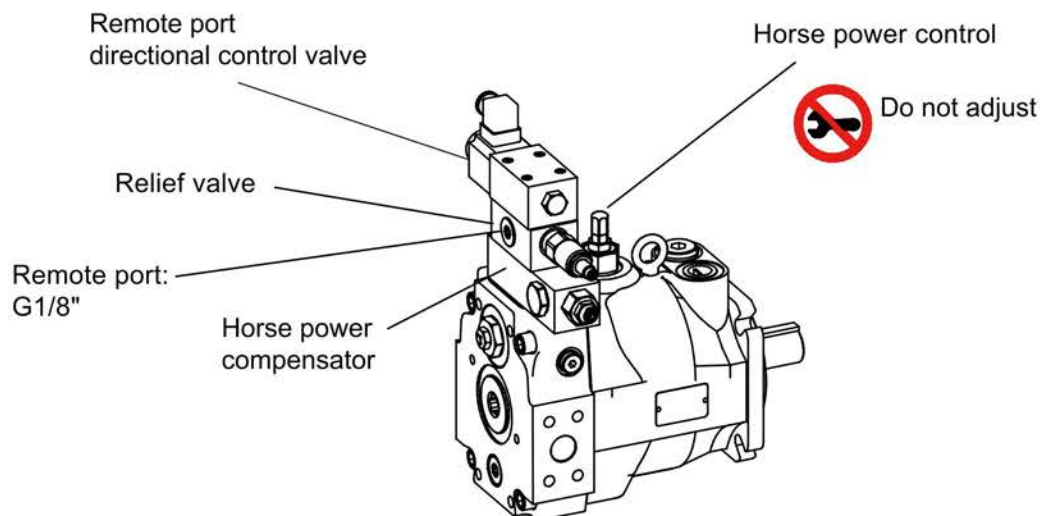

(Diagrammatic sketch)

PR Horse power compensator + Electrical unloading

The hydraulic-mechanical horse power compensator consists of a modified remote pressure compensator or of a modified load-sensing compensator and a pilot valve.

This pilot valve is integrated into the pump and is adjusted by a cam sleeve.

The cam sleeve has a contour that is designed and machined for the individual displacement and the nominal horse power setting.

At a large displacement the opening pressure (given by the cam sleeve diameter) is lower than at small displacements.


This makes the pump compensate along a constant horse power (torque) curve.

Electrical unloading function is optional by adding an electric directional control valve.

This control is suitable for long period of unloading.

Oil temperature and noise remain low level through out the electrical unloading function when the system stops working.

※ Horse power setting, please following type code.

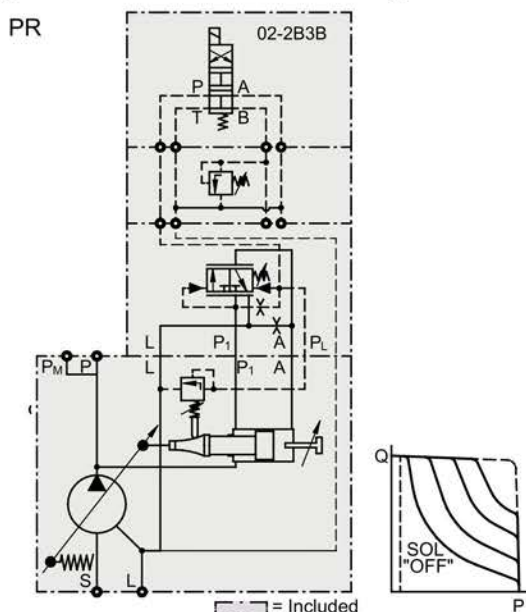


PH Horse power load-sensing compensator + Relief valve

A

39

PV Axial piston pump

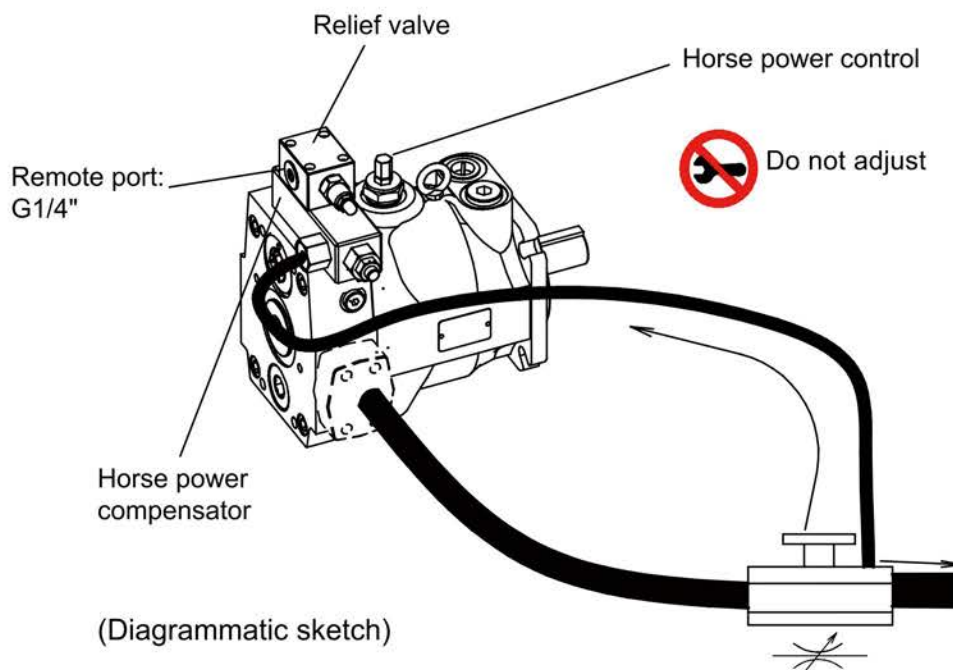

PH Horse power load-sensing compensator + Relief valve

The hydraulic-mechanical horse power compensator consists of a modified remote pressure compensator or of a modified load-sensing compensator and a pilot valve.

This pilot valve is integrated into the pump and is adjusted by a cam sleeve.

The cam sleeve has a contour that is designed and machined for the individual displacement and the nominal horse power setting.

At a large displacement the opening pressure (given by the cam sleeve diameter) is lower than at small displacements.

This makes the pump compensate along a constant horse power (torque) curve.

Horse power is optional when order.


Working pressure can be adjusted by adding a leading valve on the compensator, and pump flow can also be adjusted on the first pipe by adding an external feedback on the PF port as a control signal on the main stream.

The pilot valve can be installed remote from the pump in some distance.


That allows pressure setting, e.g. from the control panel of the machine.

The pilot flow supply is internal through the valve spool, and the pilot flow is 1~1.5 L/min.

※ Horse power setting, please following type code.

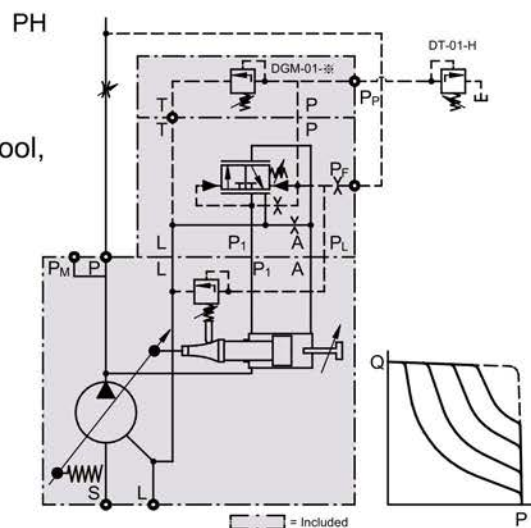

PQ Horse power load-sensing compensator + Proportional flow valve + Relief valve

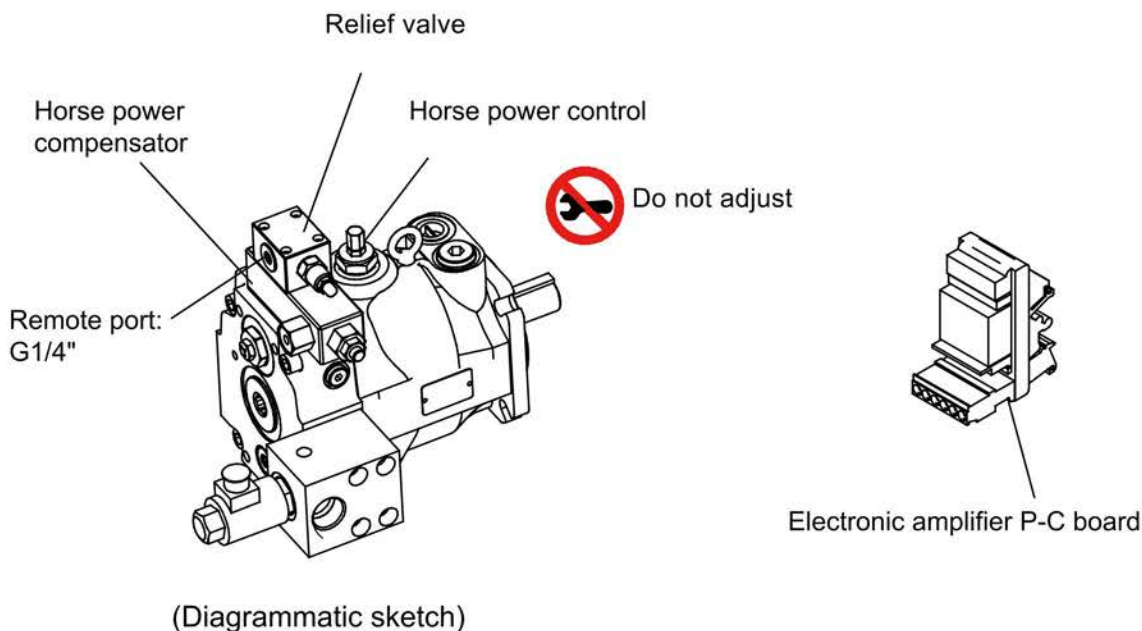

PQ Horse power load-sensing compensator + Proportional flow valve + Relief valve

The hydraulic-mechanical horse power compensator consists of a modified remote pressure compensator or of a modified load-sensing compensator and a pilot valve.

This pilot valve is integrated into the pump and is adjusted by a cam sleeve.

The cam sleeve has a contour that is designed and machined for the individual displacement and the nominal horse power setting.


At a large displacement the opening pressure (given by the cam sleeve diameter) is lower than at small displacements.

This makes the pump compensate along a constant horse power (torque) curve.

Pressure can be adjusted by adding a leading valve in the compensator, and pump flow can also be adjusted on the first pipe by adding an external feedback on the PF port as a control signal on the main stream.

Adding a proportional flow control valve on the P port achieves electrical proportional flow control.

※ Horse power setting, please following type code.

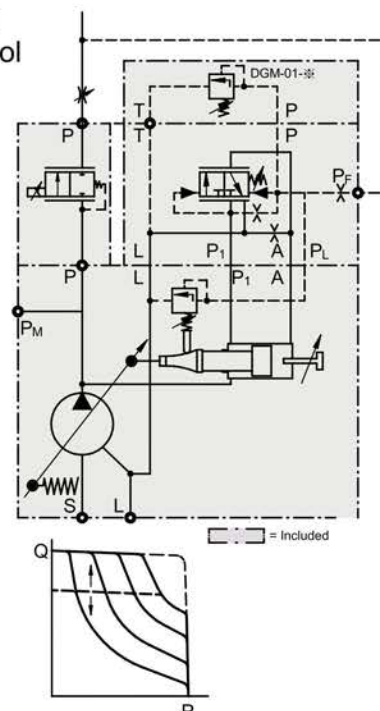


PS Horse power load-sensing compensator + Proportional pressure valve

A

41

PV Axial piston pump

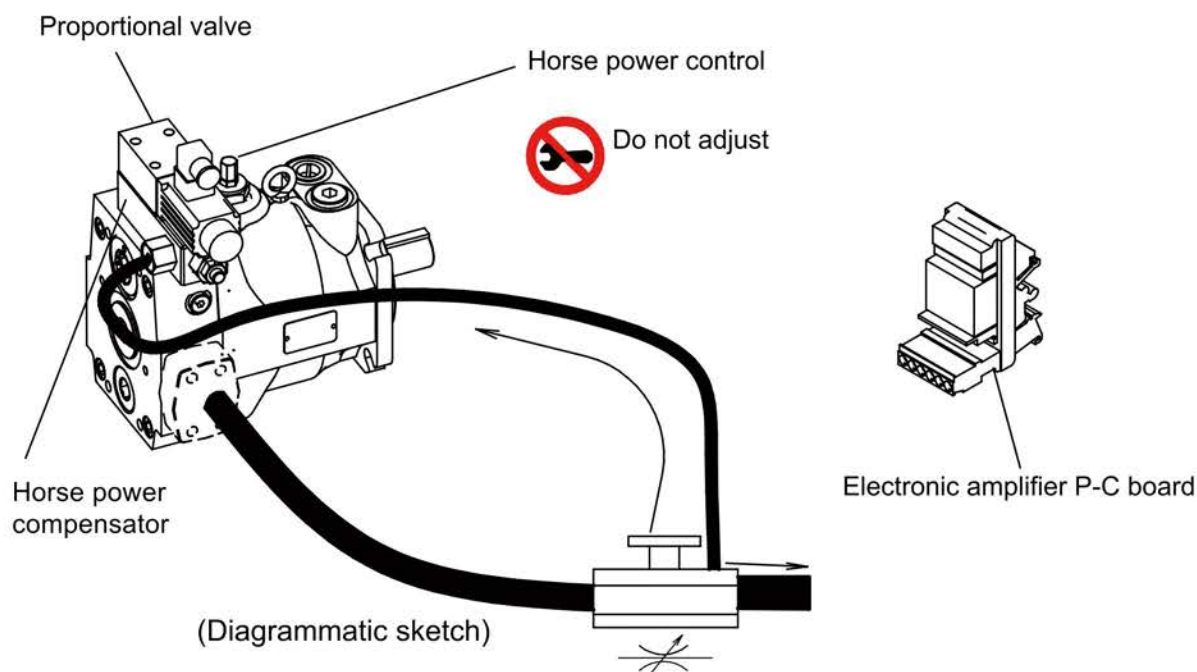

PS Horse power load-sensing compensator + Proportional pressure valve

The hydraulic-mechanical horse power compensator consists of a modified remote pressure compensator or of a modified load-sensing compensator and a pilot valve.

This pilot valve is integrated into the pump and is adjusted by a cam sleeve.

The cam sleeve has a contour that is designed and machined for the individual displacement and the nominal horse power setting.


At a large displacement the opening pressure (given by the cam sleeve diameter) is lower than at small displacements.

This makes the pump compensate along a constant horse power (torque) curve.

Electrical pressure-adjusted function is optional by adding a leading proportional pressure valve, and pump flow can also be adjusted on the first pipe by adding an external feedback on the PF port as a control signal on the main stream.

※ Horse power setting, please following type code.

※ Proportional pressure max.250 bar.
If needing any other pressure range,
please contact YEOSHE.

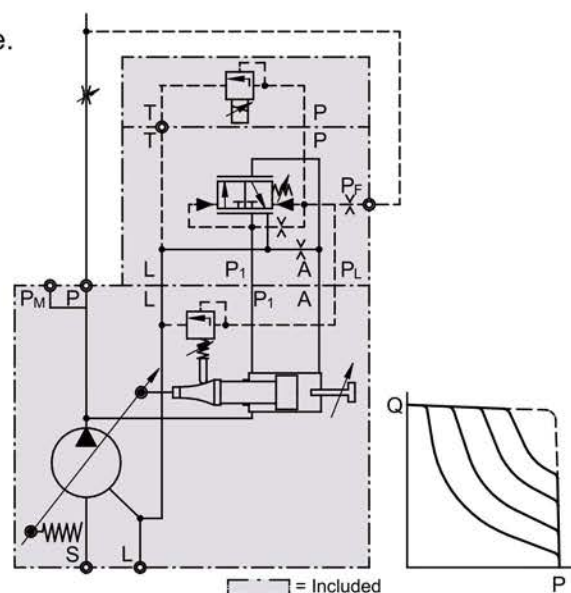







Horse power compensator, diagrams

A



42

PV Axial piston pump

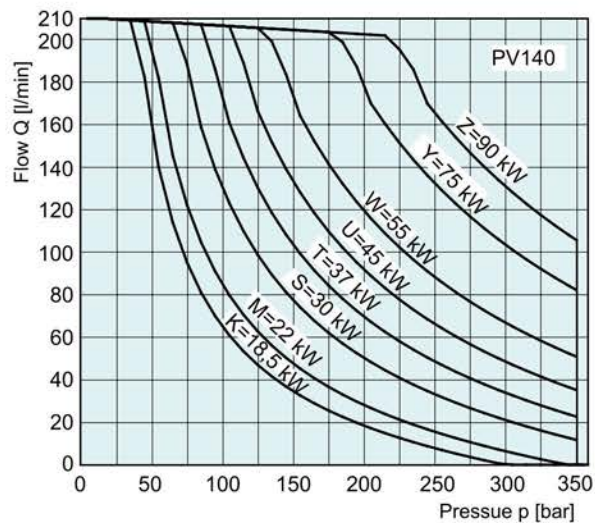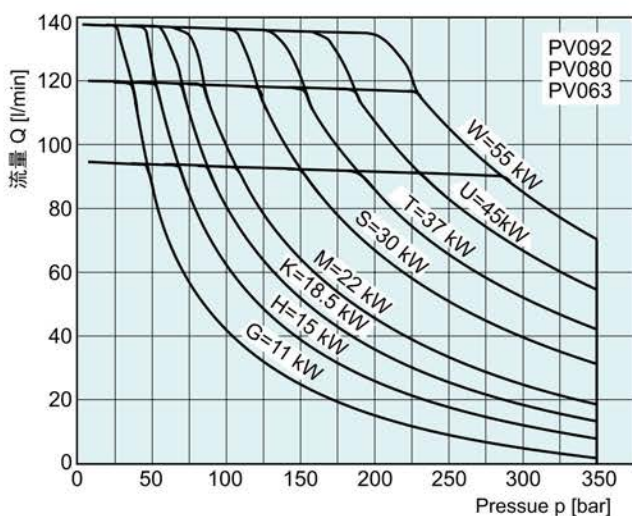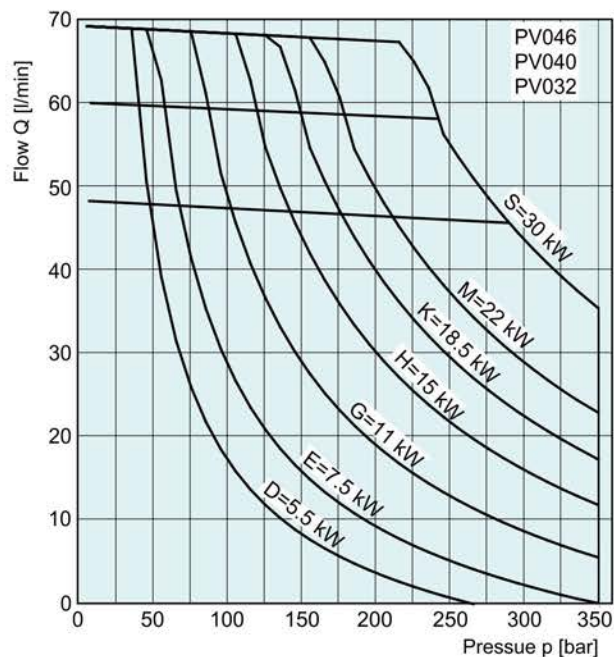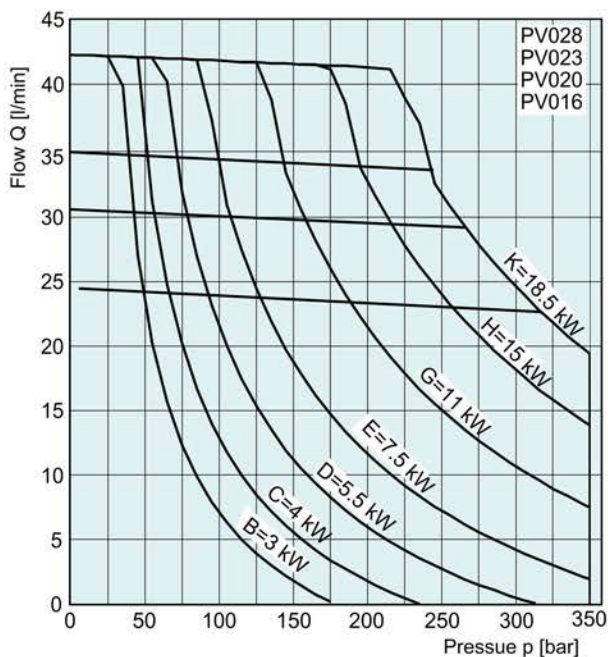

The diagrams are only valid for the following working conditions:
 speed: $n=1500$ (---) and 1800 (---) rev/min
 temperature: $t=50^{\circ}\text{C}$
 fluid: mineral oil HLP, ISO VG46
 viscosity: $\nu=46$ mm²/s at 40°C

Horse power compensator, diagrams

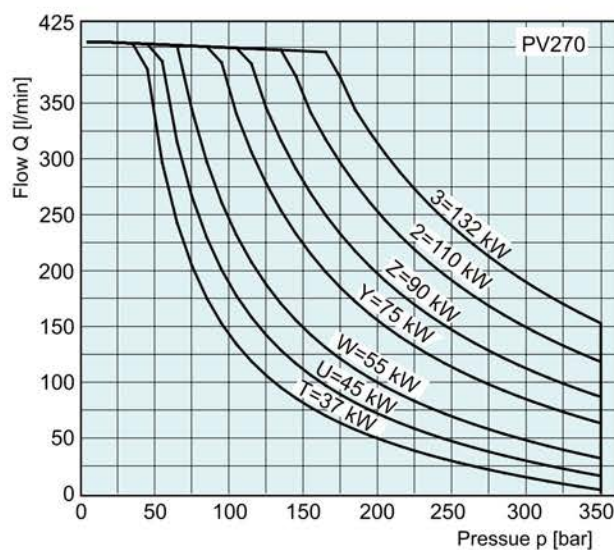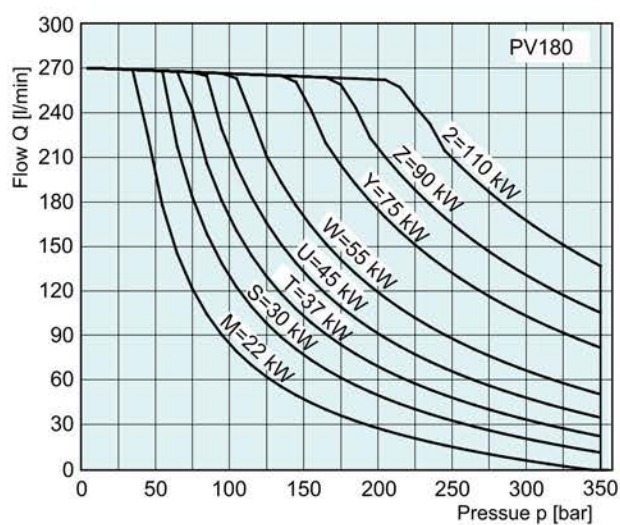

The diagrams are only valid for the following working conditions:
 speed: $n=1500$ (---) and 1800 (---) rev/min
 temperature: $t=50^{\circ}\text{C}$
 fluid: mineral oil HLP, ISO VG46
 viscosity: $v=46$ mm²/s at 40°C








Noise diagrams

A

44

PV Axial piston pump

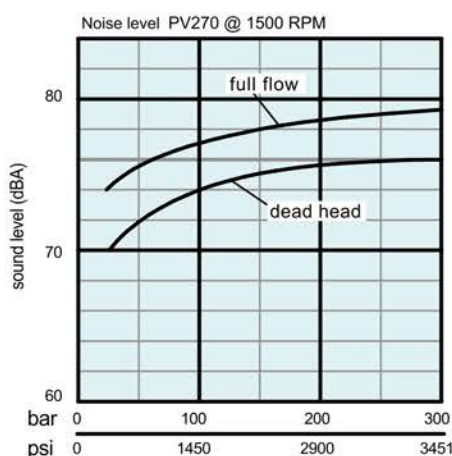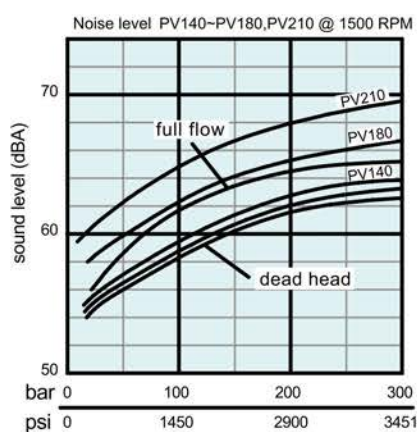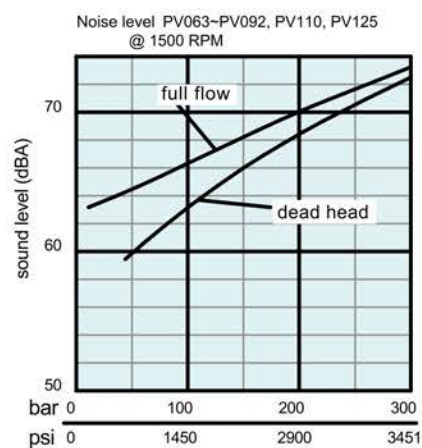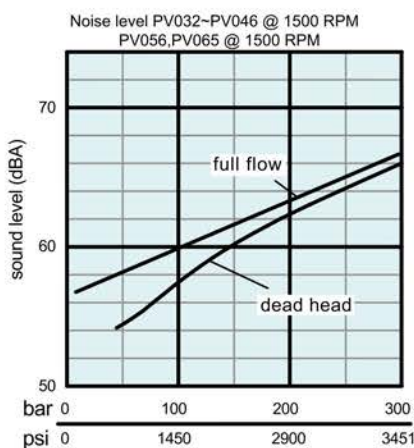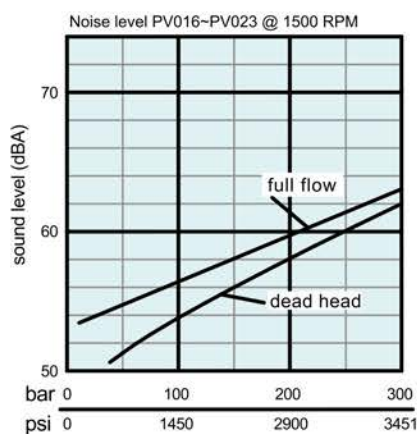

Test condition:

The noise of the single pump is according to the standard of DIN 45635, the rule of 1 and 26, at low echo measurement laboratory, measuring that the distance of microphone is 1m and 1500rpm.

Notice:









At the best time to install, the volume noise of hydraulic equipment is always 6 ~ 10 dBA higher than measuring at low echo measurement laboratory.

Proportional flow performance

A

45

PV Axial piston pump

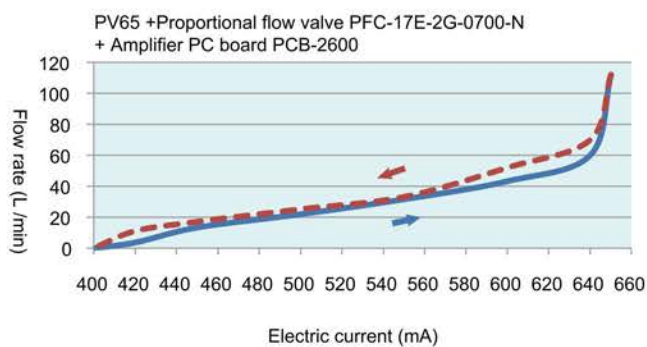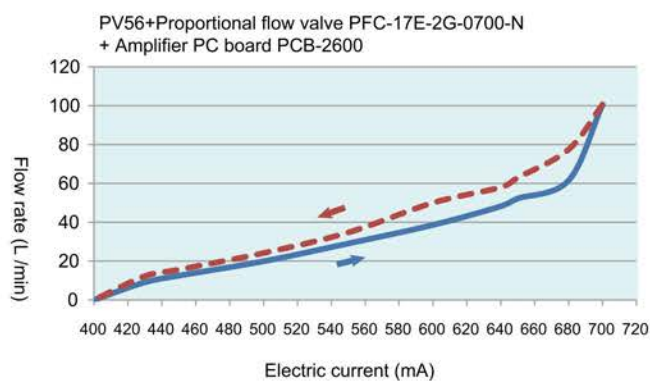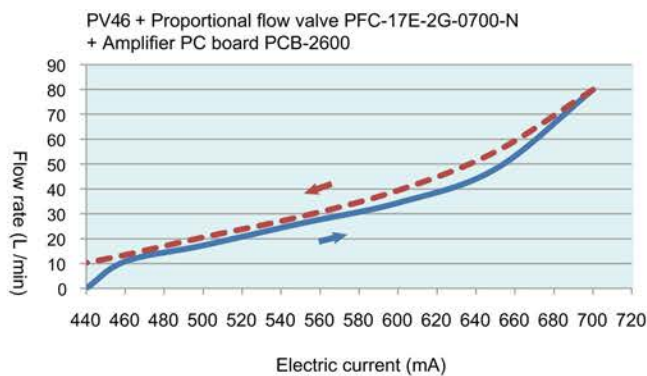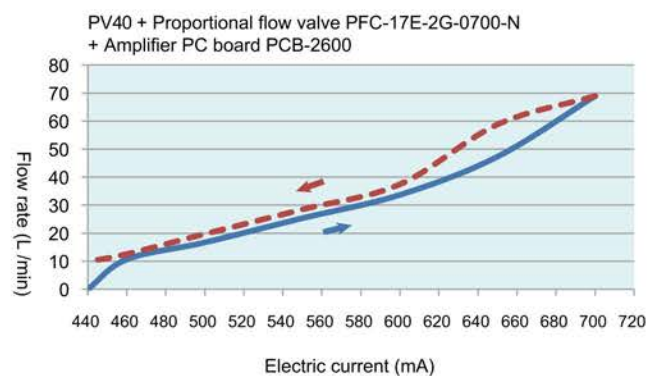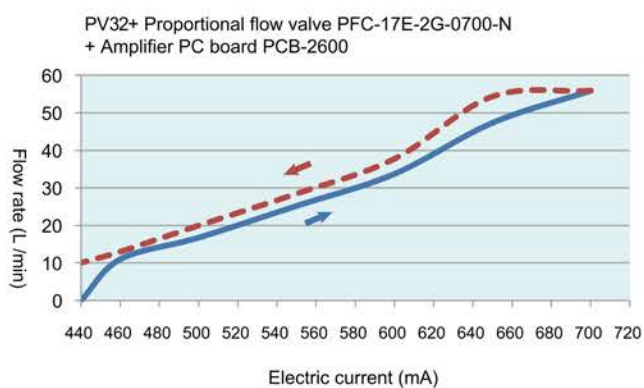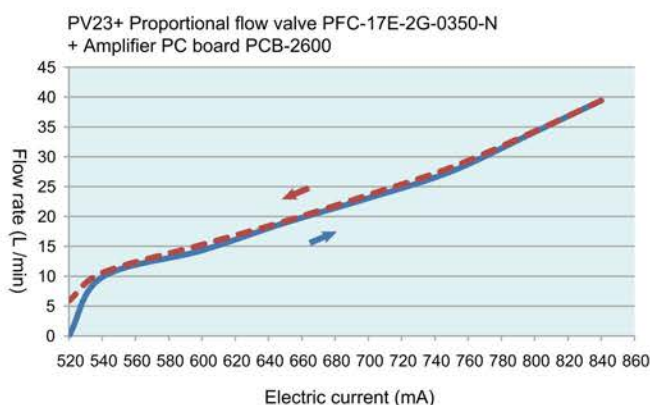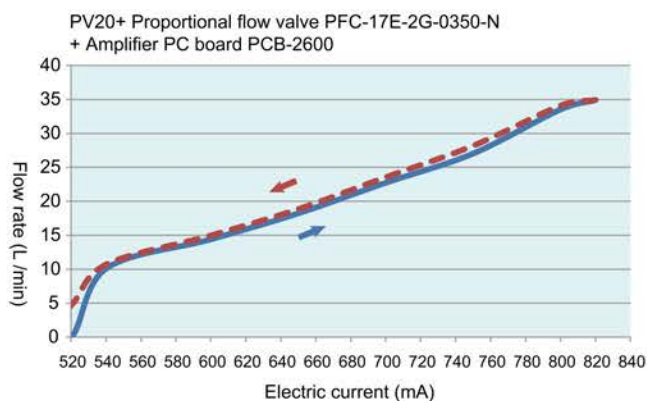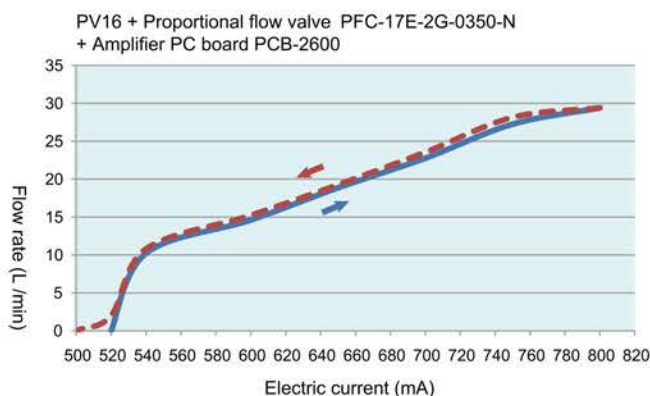




Proportional flow performance

A


46

PV Axial piston pump


PV63 + Proportional flow valve PFC-17E-2G-0700-N
+ Amplifier PC board PCB-2600

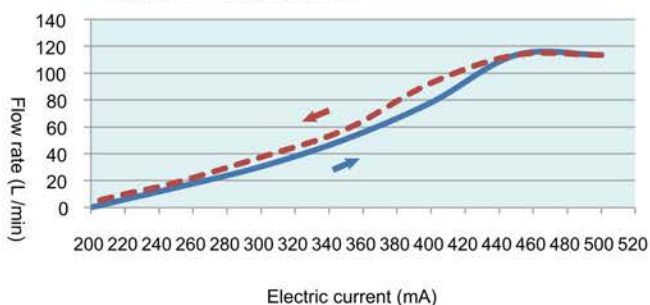


PV80 + Proportional flow valve PEV-16A-2D-09-N-1600
+ Amplifier PC board PCB-2600

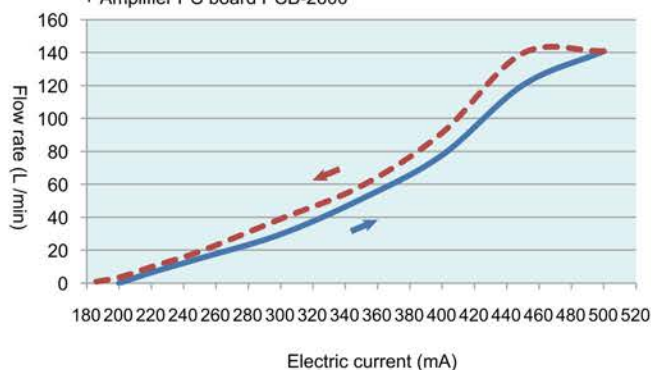


PV92 + Proportional flow valve PEV - 16A-2D-09-N-1600
+ Amplifier PC board PCB-2600

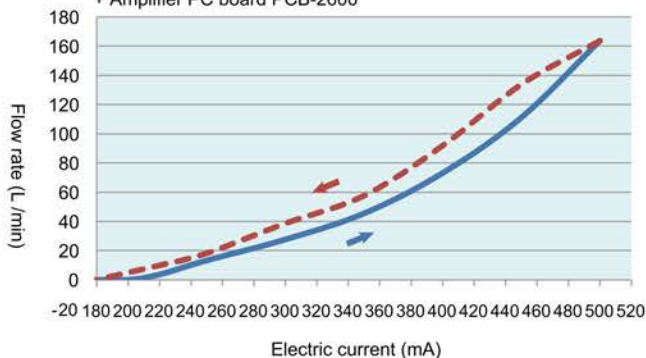


PV110 + Proportional flow valve PEV-16A-2D-09-N-1600
+ Amplifier PC board PCB-2600

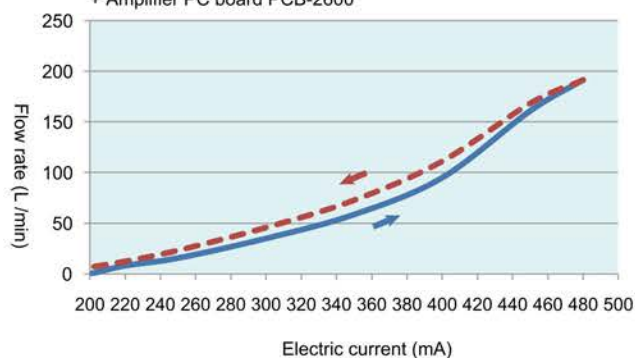


PV125 + Proportional flow valve PEV-16A-2D-09-N-1600
+ Amplifier PC board PCB-2600

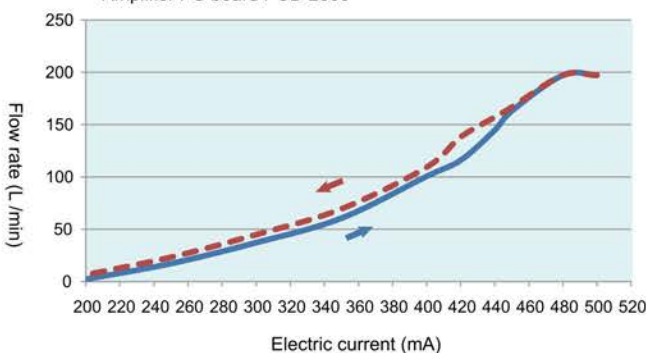


PV140 + Proportional flow valve PEV-18A-2D-09-N-3200
+ Amplifier PC board PCB-2600

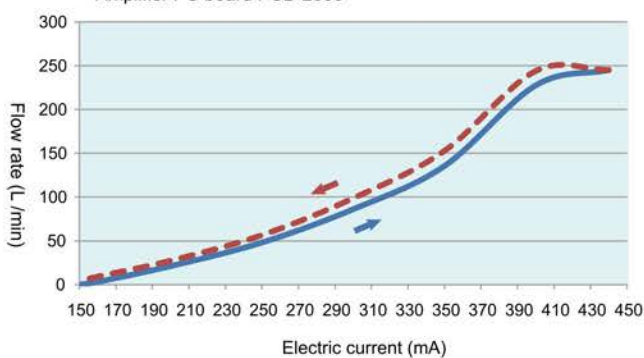

PV180 + Proportional flow valve PEV-18A-2D-09-N-3200
+ Amplifier PC board PCB-2600

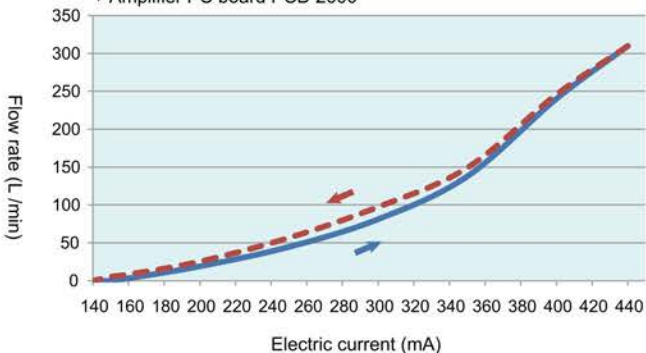

Proportional flow performance

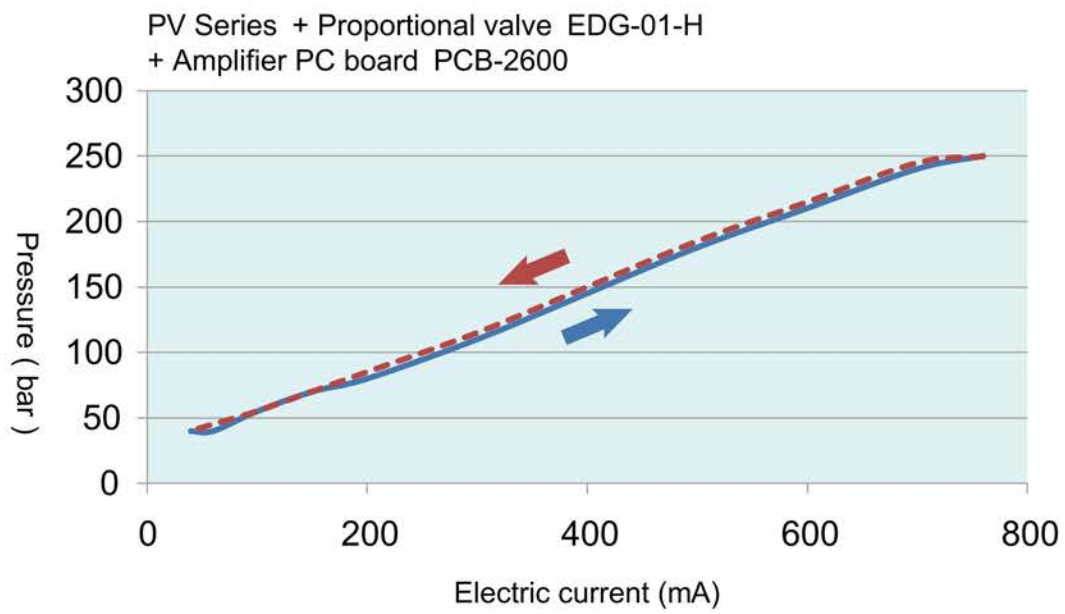


Proportional amplifier

PCB-2600

A

48

PV Axial piston pump

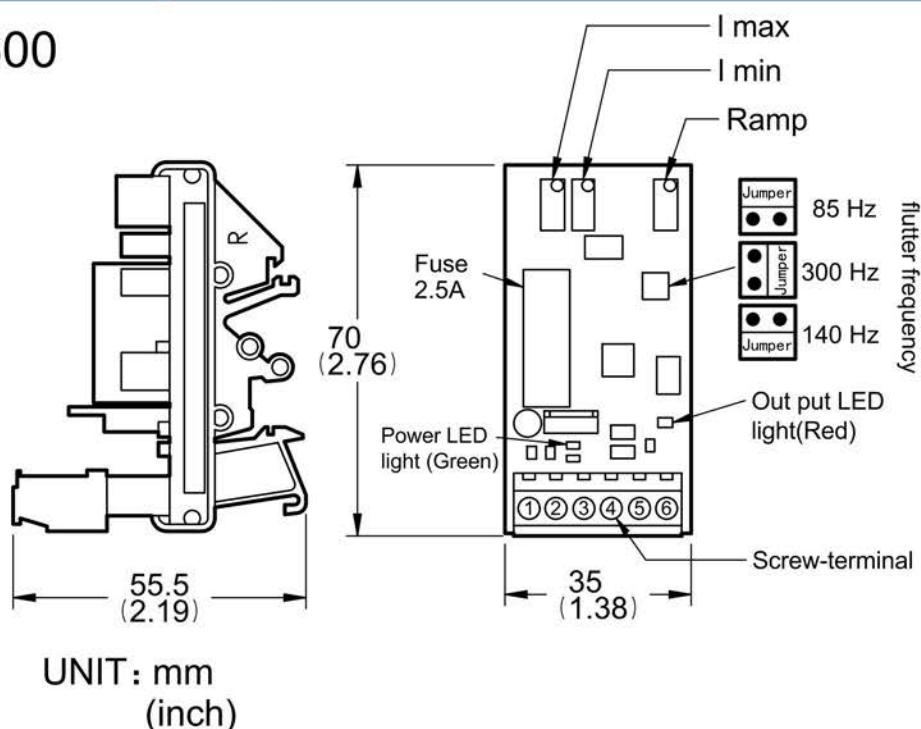

Instructions for setting

Supply: green LED

RAMP: ramping up/down time adjustment.
For long ramping times, turn potentiometers clockwise,
for short ramping times, turn potentiometers
counter-clockwise.

MAX/MIN:

I max / I min

There are multi-course potentiometers for
adjustment of min-max and also ramp time.

Frequency ADJ.:

The dither frequency can be set with a jumper to
85, 140, or 300 Hz.

Technical data

Supply voltage: 10-35 VDC

Max. current: 0-2600 mA adjustable
for 12 and 24 VDC
(Output is a PWM-DC)

Min. current: 0-600 mA adjustable**Ramp adjustment:** 0~5 Sec.

Dither frequency: 85, 140, 300 Hz to
be set by jumper(Standard 140 Hz)

Ambient operating temperature: -15~140°F
-10~60°C

Weight: 0.05kg

NOTICE

Do not remove the amplifier from the coil while the
power is on.


This will cause a failure in the internal circuits of the
amplifier, resulting in loss of output to the coil.

Proportional amplifier

A

49

PV Axial piston pump

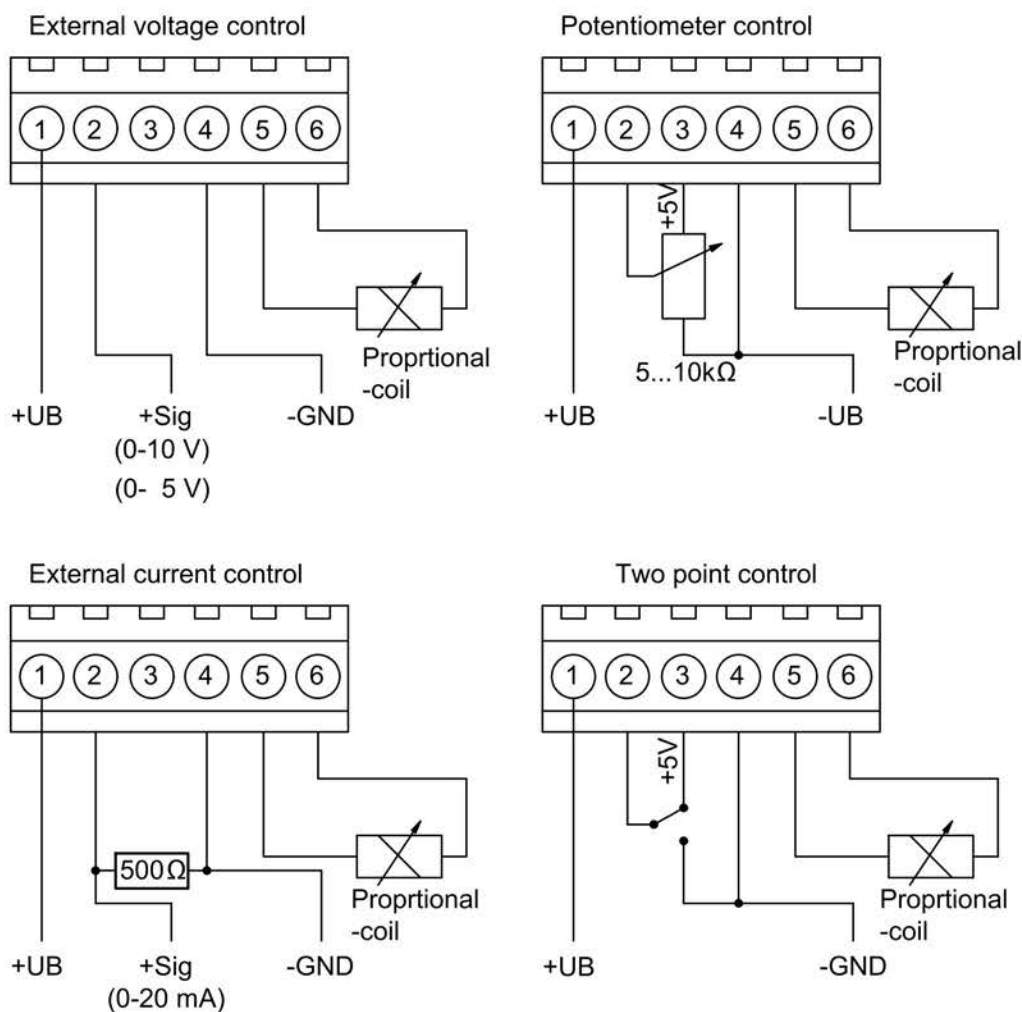


. Clamp connections plug in connector
 Pin 1 = + UB; supply voltage (10-35 VDC)
 Pin 2 = Control voltage (+ Sig)
 Pin 3 = Auxiliary voltage (+ 5 VDC)
 Pin 4 = Ground (GND)
 Pin 5 = Solenoid (-)
 Pin 6 = Solenoid (+)

. Potentiometer
 Turn clockwise means increasing current or
 Extension of ramp time
 App. 10 turns for complete range

. Fuse
 Standard 20 mm Glass fuse 2.5 A T

. LED's
 LED +VS (green) = lights, when voltage supply
 and fuse are in order
 LED1 (red) = lights, if there is an output to the
 solenoid

Efficiency and case drain flows

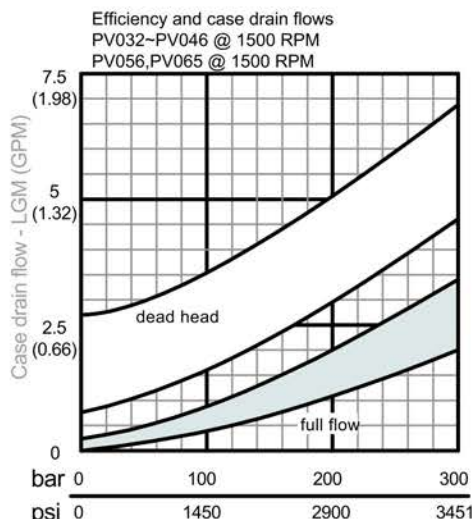

The efficiency and power graphs are measured at an input speed of $n = 1500$ RPM, a temperature of 40°C and a fluid viscosity of $46 \text{ mm}^2/\text{s}$.





Case drain flow and compensator control flow leave via the drain port of the pump.

To the values shown are to be added 1 to 1.2 l/min, if at pilot operated compensators (codes G*, H*, P*, horse power compensator and p/Q-control) the control flow of the pressure pilot valve also goes through the pump.

Please note: The values shown below are only valid for static operation.

Under dynamic conditions and at rapid compensation of the pump the volume displaced by the servo piston also leaves the case drain port.

This dynamic control flow can reach up to 60 l/min! Therefore the case drain line is to lead to the reservoir at full size and without restrictions as short and direct as possible.

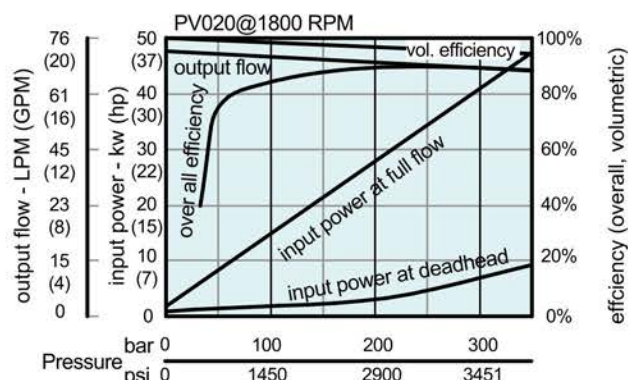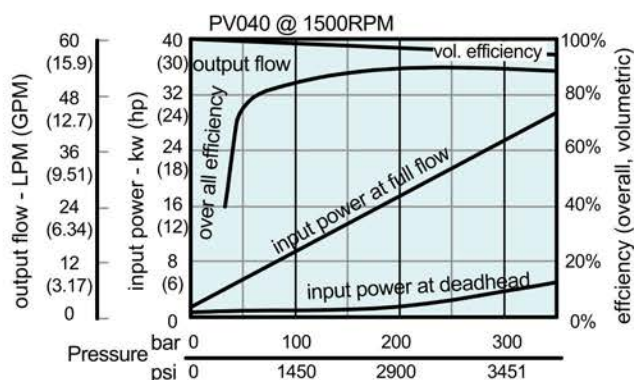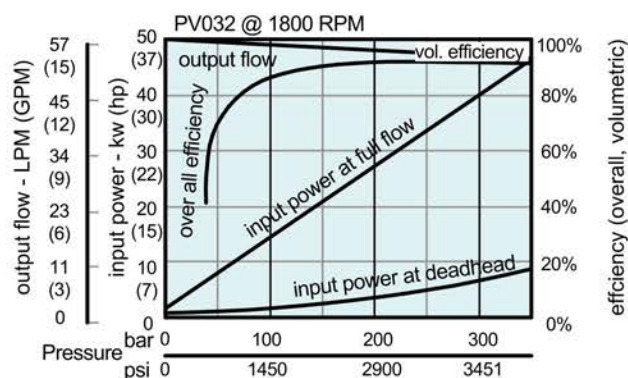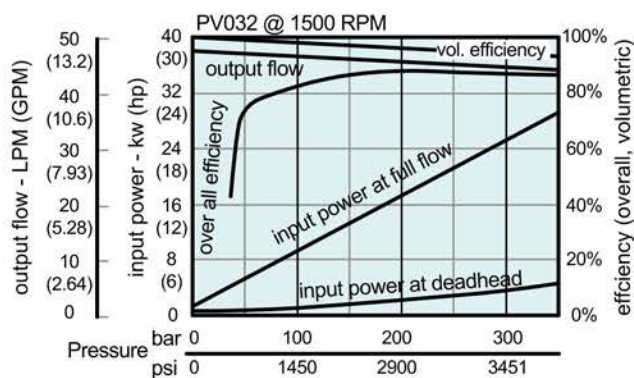









Efficiency and case drain flows

A

PV032 ~ PV046, PV056, PV065 (Body 2)

PV Axial piston pump

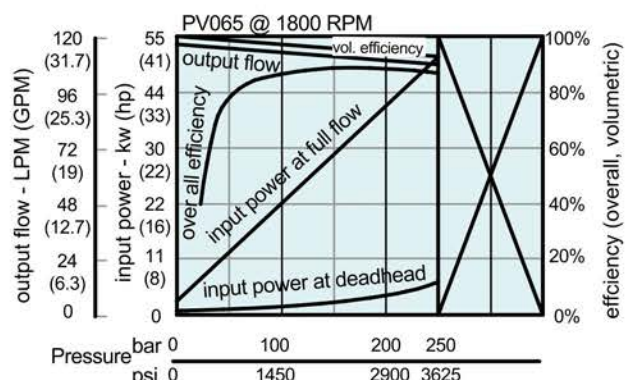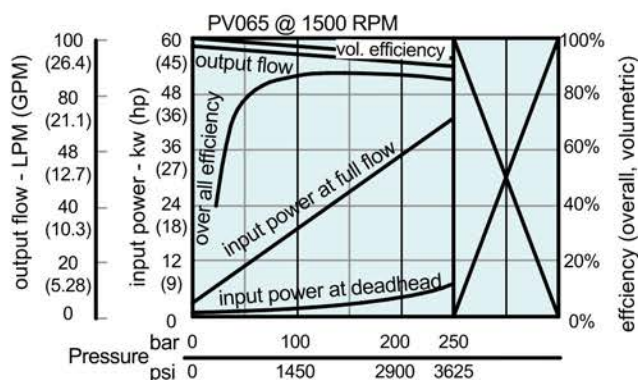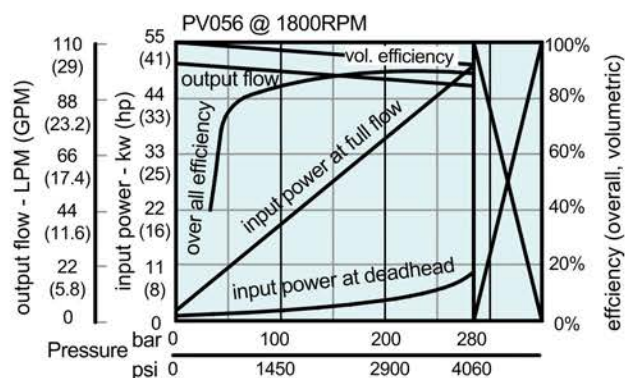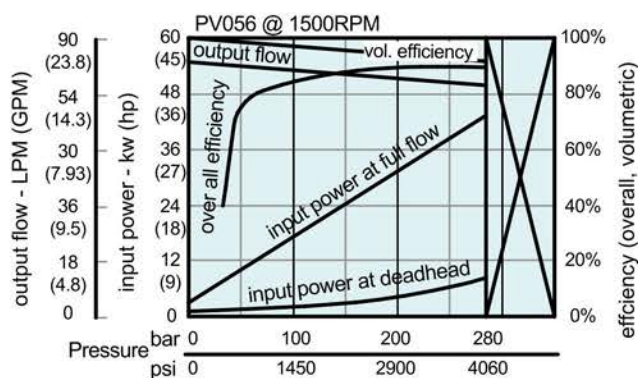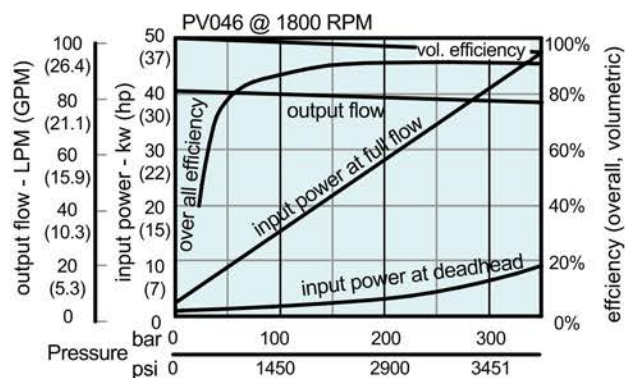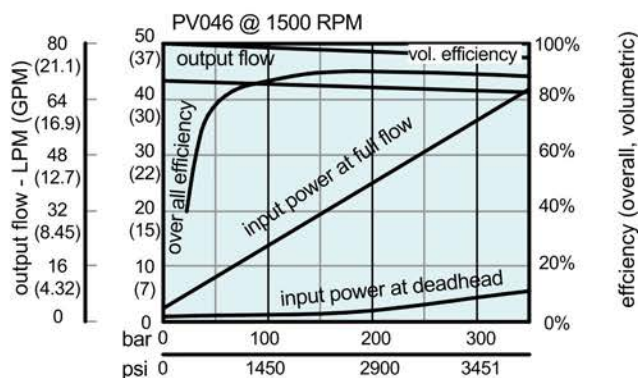

Dimension


A

59

PV Axial piston pump

PV032 ~ PV046, PV056, PV065 (Body 2)

Metric version (motor mounting Ø125)

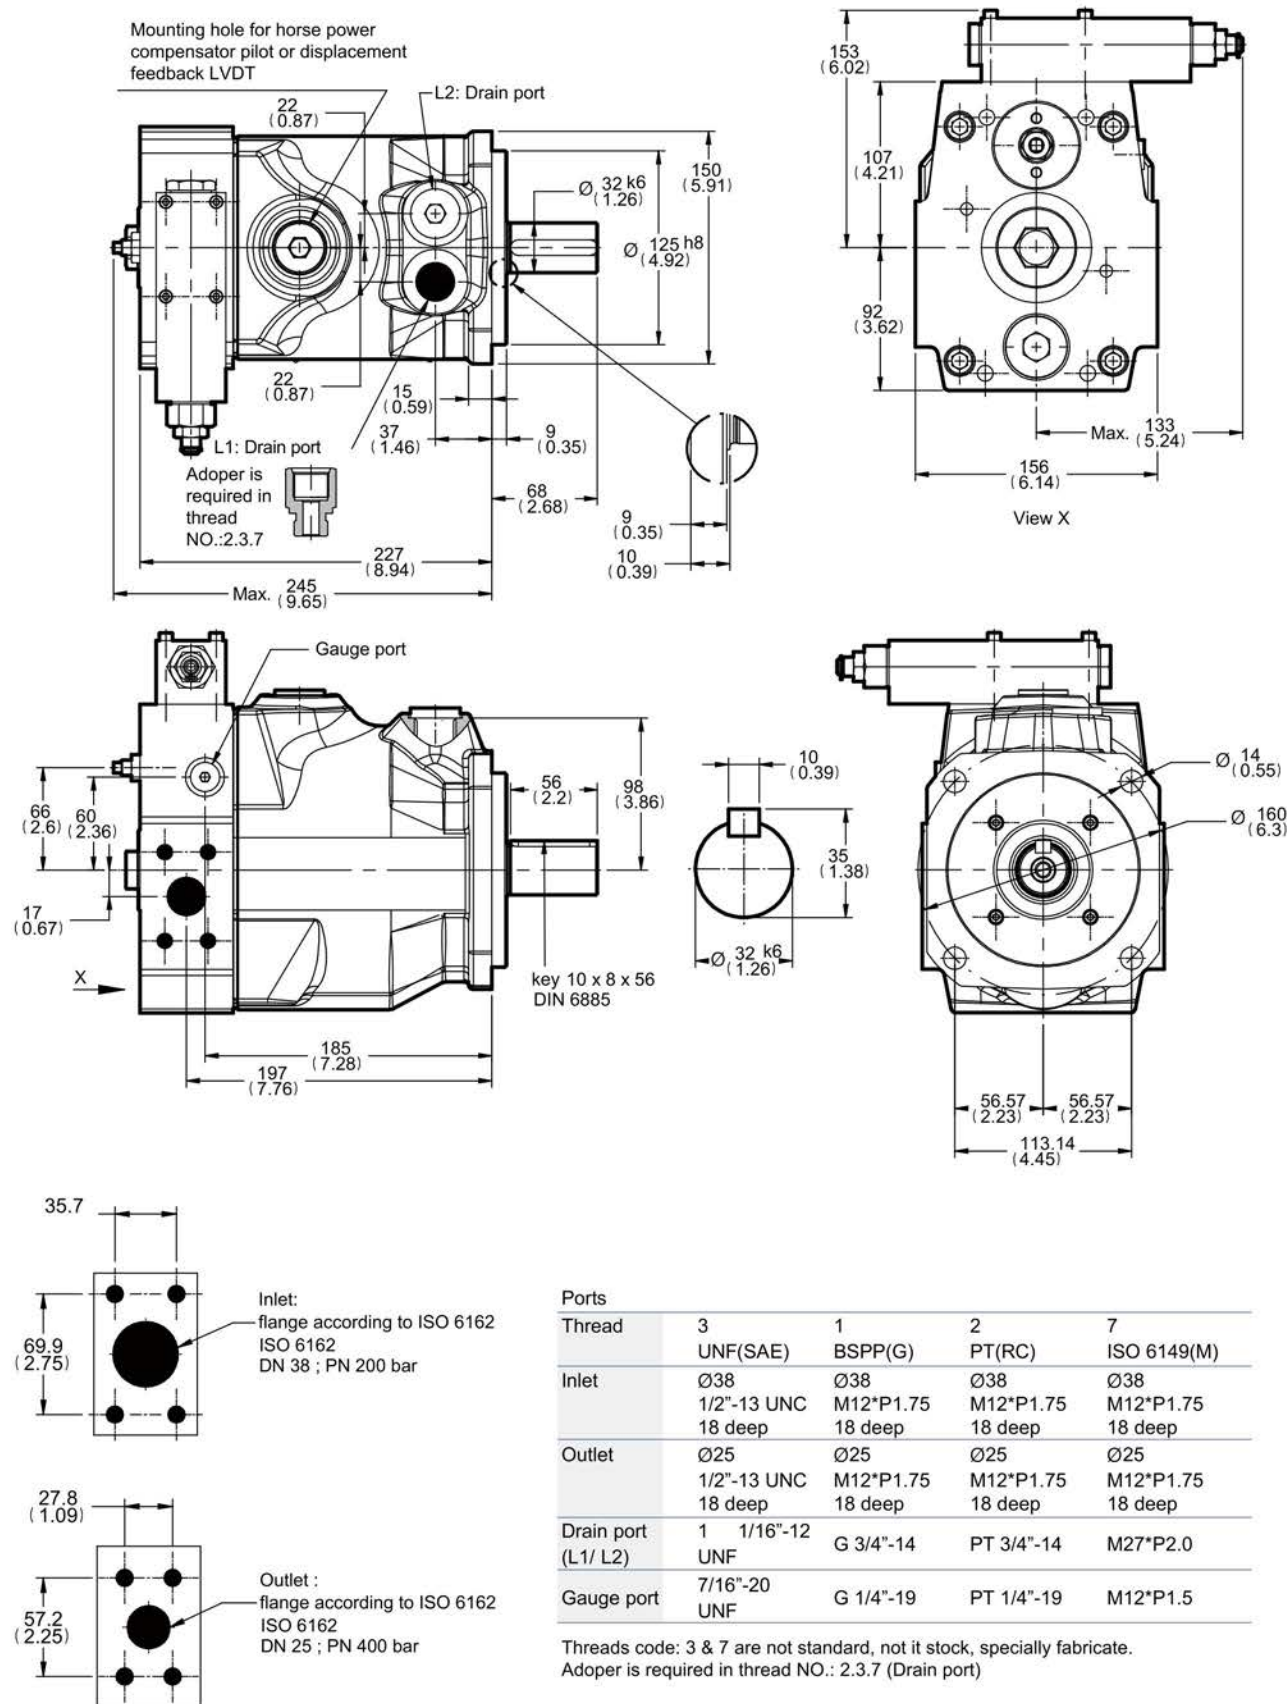




Dimension

PV032 ~ PV046, PV056, PV065 (Body 2)


Metric version (motor mounting Ø125)

Shaft type


Mounting code: **M**

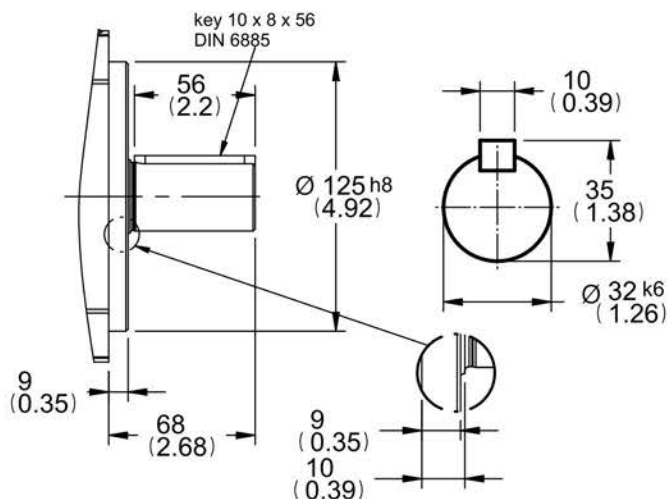


Mounting code: **R**

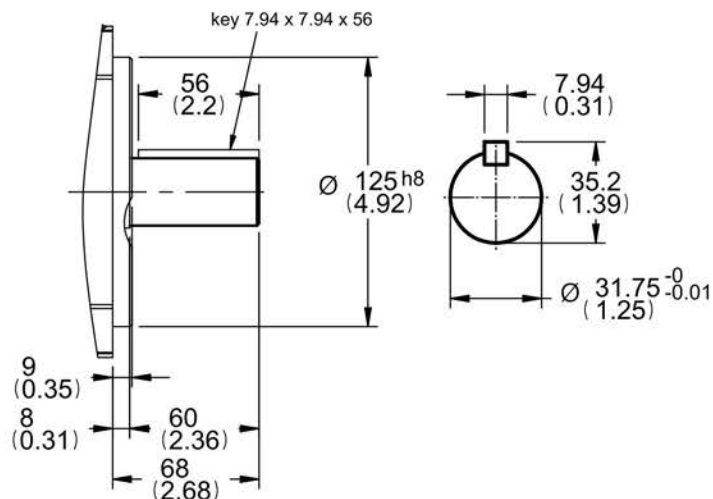


Mounting code: **K**

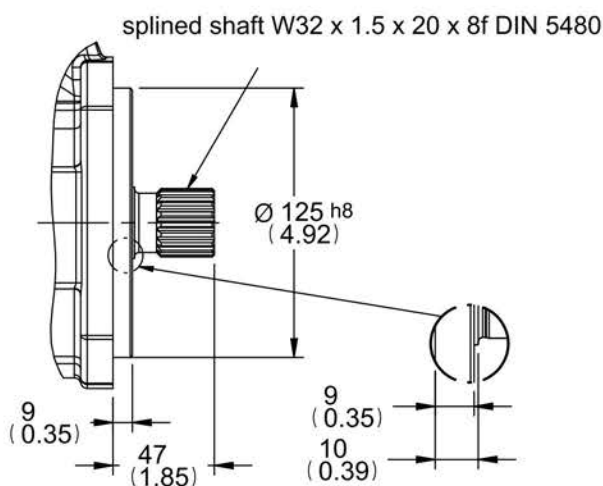

Mounting code: **S**

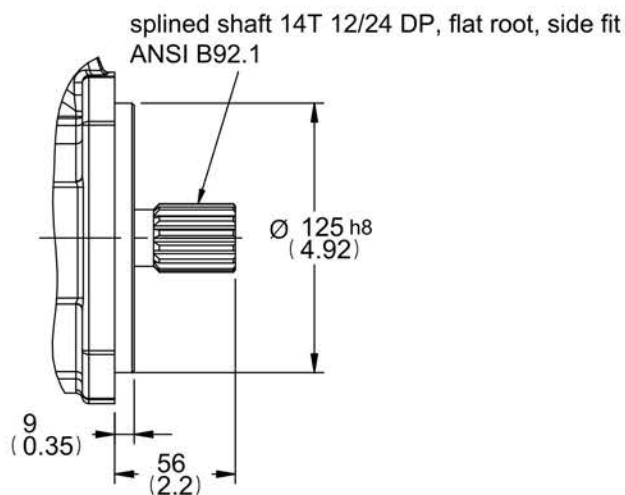

Mounting code: **P**

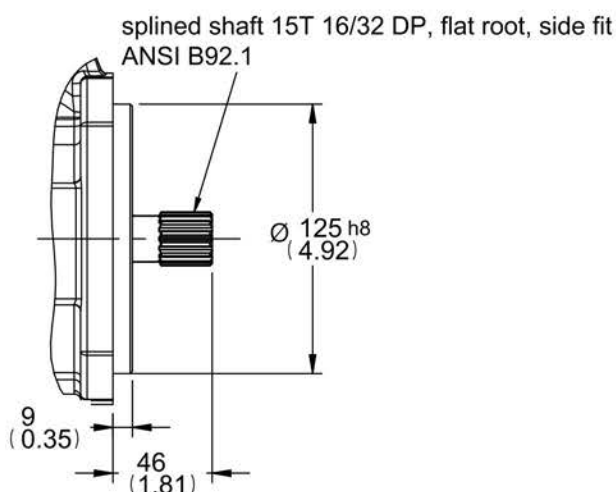

Dimension


PV032 ~ PV046, PV056, PV065 (Body 2)

SAE version (motor mounting Ø127)

A

61

PV Axial piston pump

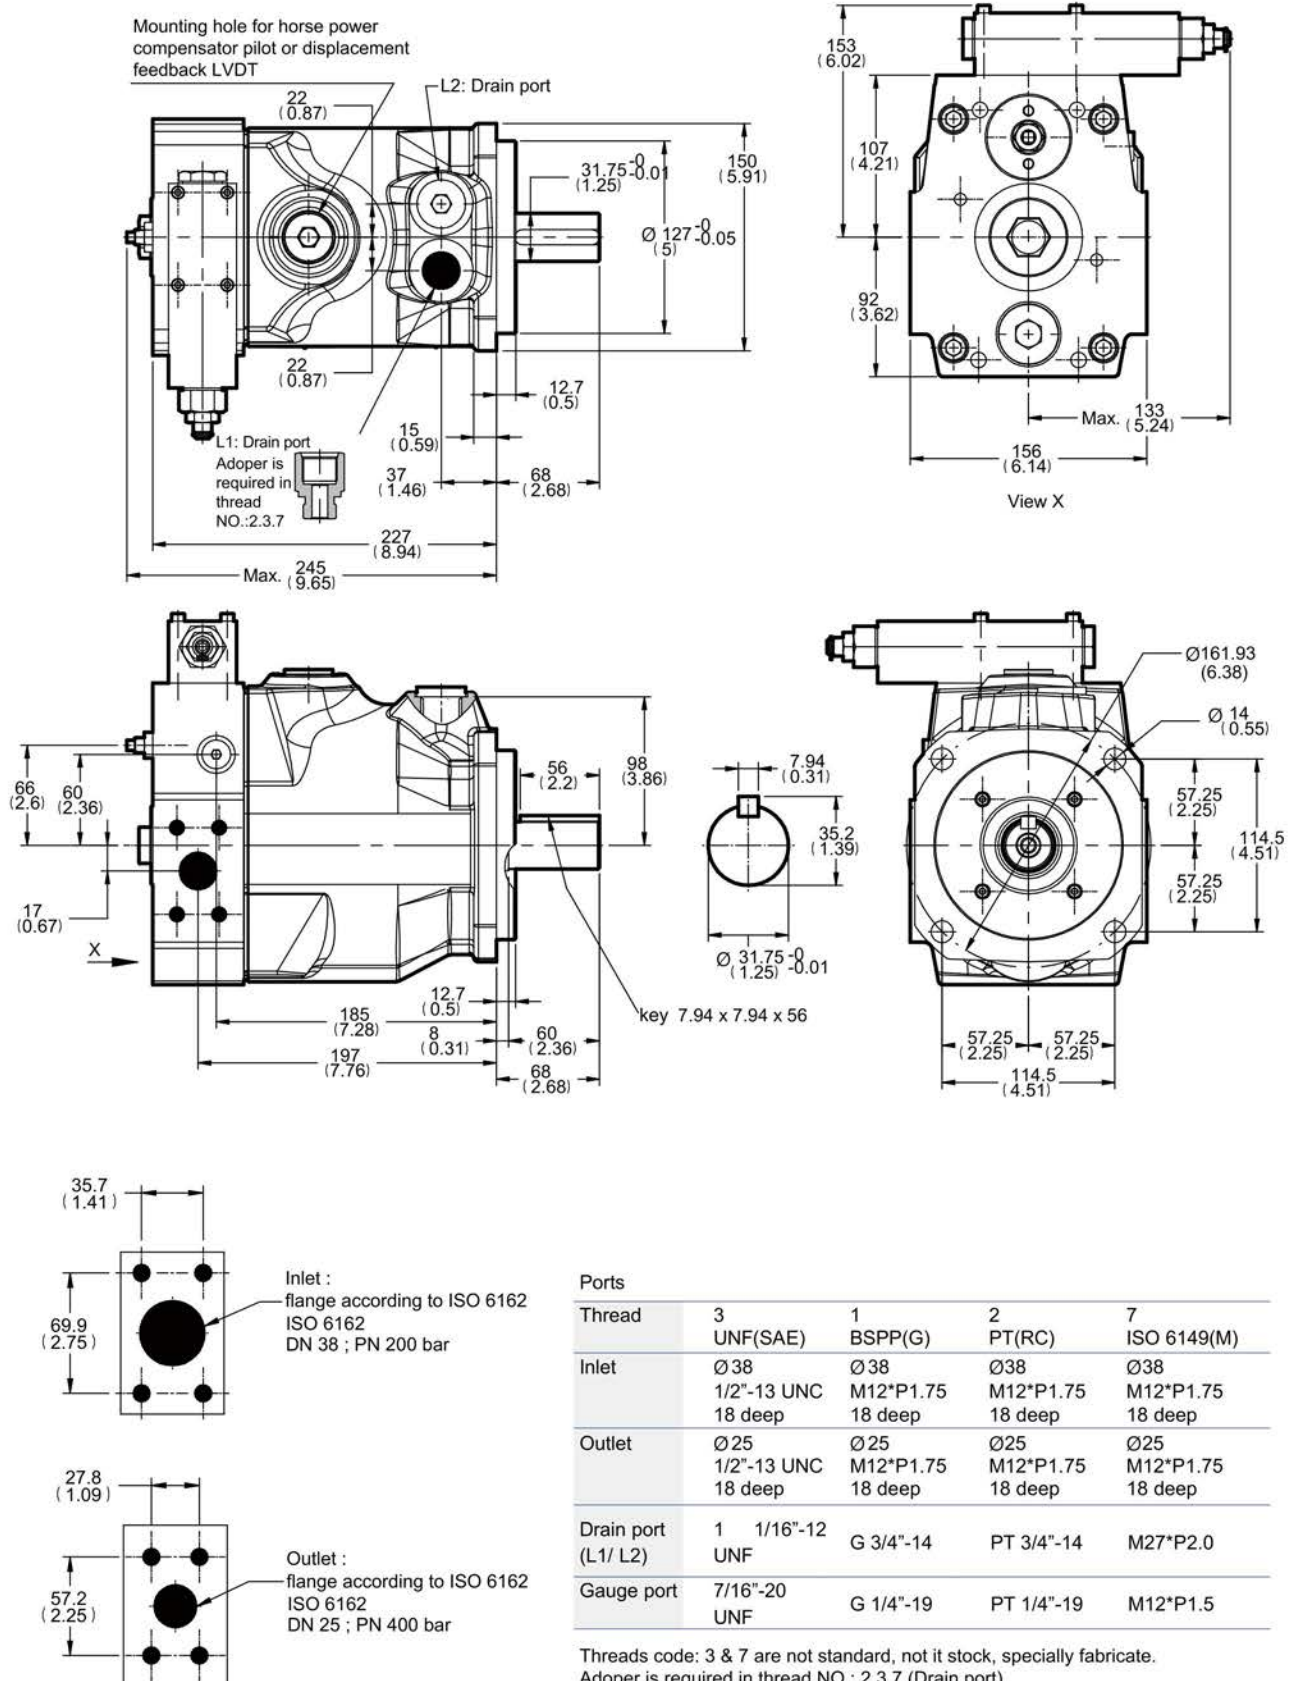




Dimension

PV032 ~ PV046, PV056, PV065 (Body 2)


SAE version (motor mounting Ø127)

Shaft type


Mounting code: **[N]**

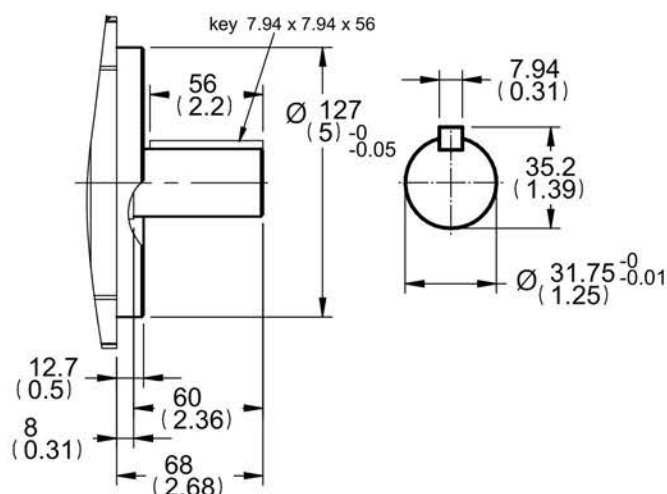


Mounting code: **[J]**

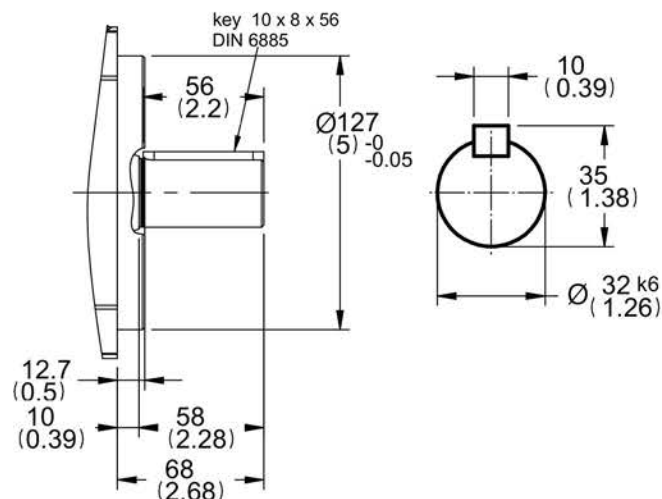


Mounting code: **[D]**

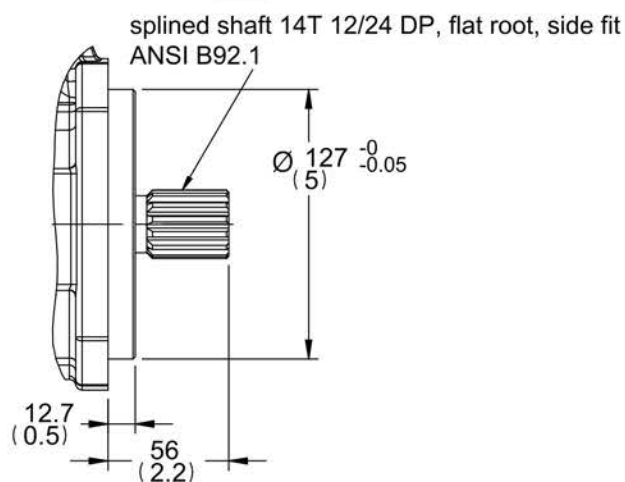

Mounting code: **[U]**

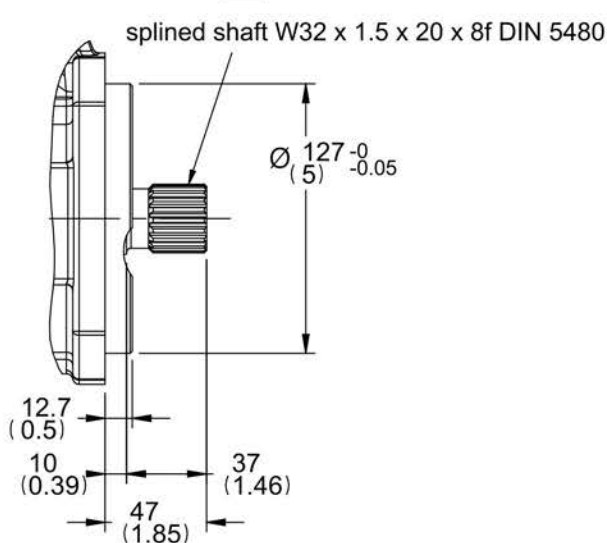

Mounting code: **[G]**

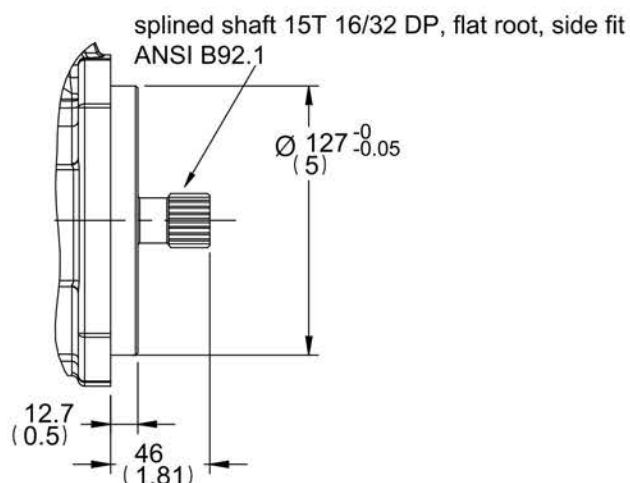

Dimension

PV032 ~ PV046, PV056, PV065 (Body 2)

Thru drive



A

63

PV Axial piston pump

Thru drive:

D, E, F, I, J, K, L

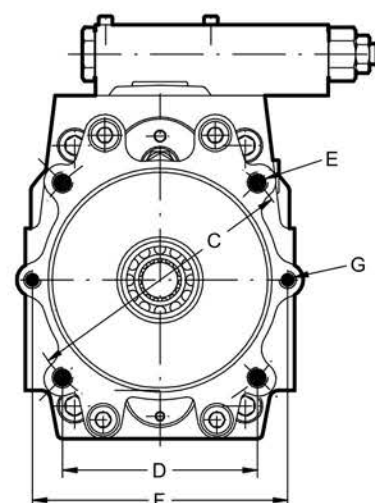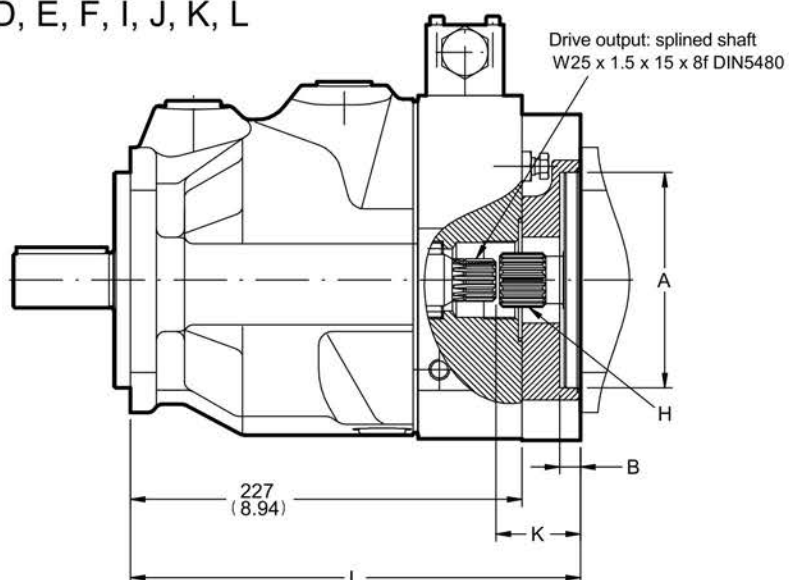

Thru shaft adaptors are available with the following dimensions:									
thru code	A	B	C	D	E	F	G	K	L
I	63	8.5	85	-	M8	100	M8	49	261
J	80	8.5	103	-	M8	109	M10	49	261
K	100	10.5	125	-	M10	140	M12	49	261
L	125	12	160	-	M12	n. avail.	n. avail.	49	261
D	82.55	8	-	-	-	106	M10	49	261
E	101.6	11	-	89.8	M10	146	M12	49	261
F	127	13.5	-	114.5	M12	n. avail.	n. avail.	64	276

Thread codes are 3 and 7
the dimensions E and G are
UNC-2B threads

threads code: 3 and 7 Not
standard, not in stock
require special requests







Dimension

PV032 ~ PV046, PV056, PV065 (Body 2) Inlet / Outlet Flange



Inlet Flange

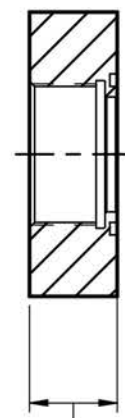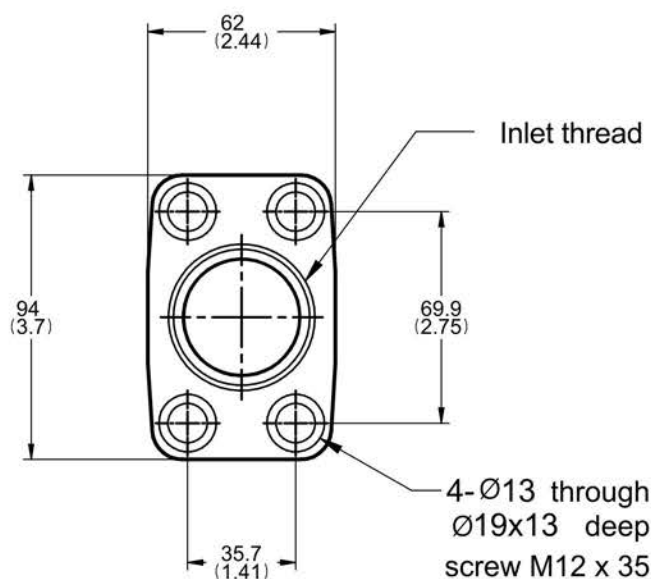

O-ring G50

29 (1.14) (Threads code:1)
29.5 (1.16) (Threads code:2)

Outlet Flange

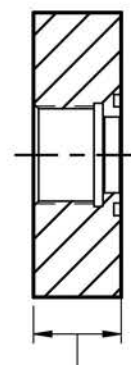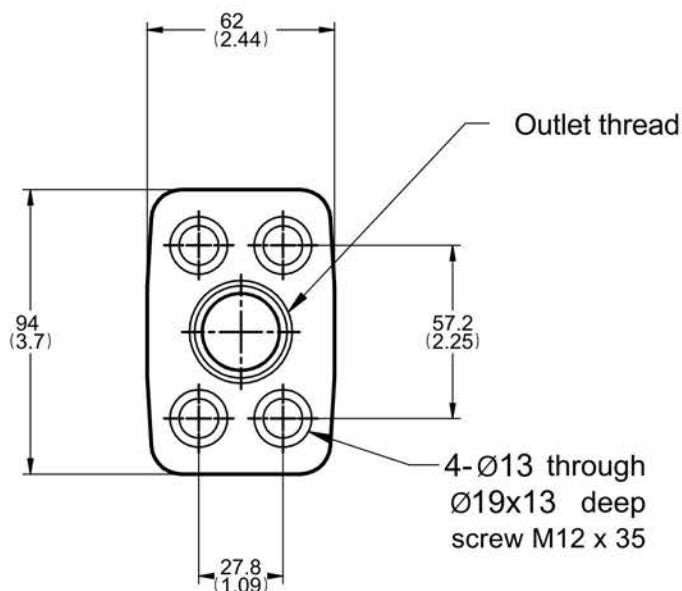

O-ring G35

29 (1.14) (Threads code:1)
29.5 (1.16) (Threads code:2)

Ports

Thread code	3 UNF(SAE)	1 BSPP(G)	2 PT(RC)	7 ISO 6149(M)
Inlet	1 7/8"-12 UN	G 1 1/2"-11	PT 1 1/2"-11	M48*P2.0
Outlet	1 5/16"-12 UN	G 1"-11	PT 1"-11	M33*P2.0

threads code: 3 & 7 are not standard, not it stock, specially fabricate.